

SECTION 7


AUDIO/VIDEO SYSTEM

• Quick reference	164
• Using your audio/video system	169
Some basics	169
Radio operation	176
Radio operation (XM® Satellite Radio broadcast)	178
CD changer operation	183
DVD changer operation	192
Bluetooth® audio operation	209
USB memory/iPod operation	215
• Audio/video remote controls	220
• Rear seat entertainment system features	224
Using the radio	232
Using the front DVD player	233
Using the rear DVD player	233
Playing an audio CD/CD text	236
Playing MP3/WMA discs	236
Playing DVD video/audio	237
Using the video mode	246
Changing other settings	247
Display the map screen	249
• Audio/video system operating hints	249

Quick reference

Operations such as selecting a preset station and adjusting the sound balance are carried out on the screen. To display the audio screen, push the “**AUDIO**” button.


►DVD changer (Type A)

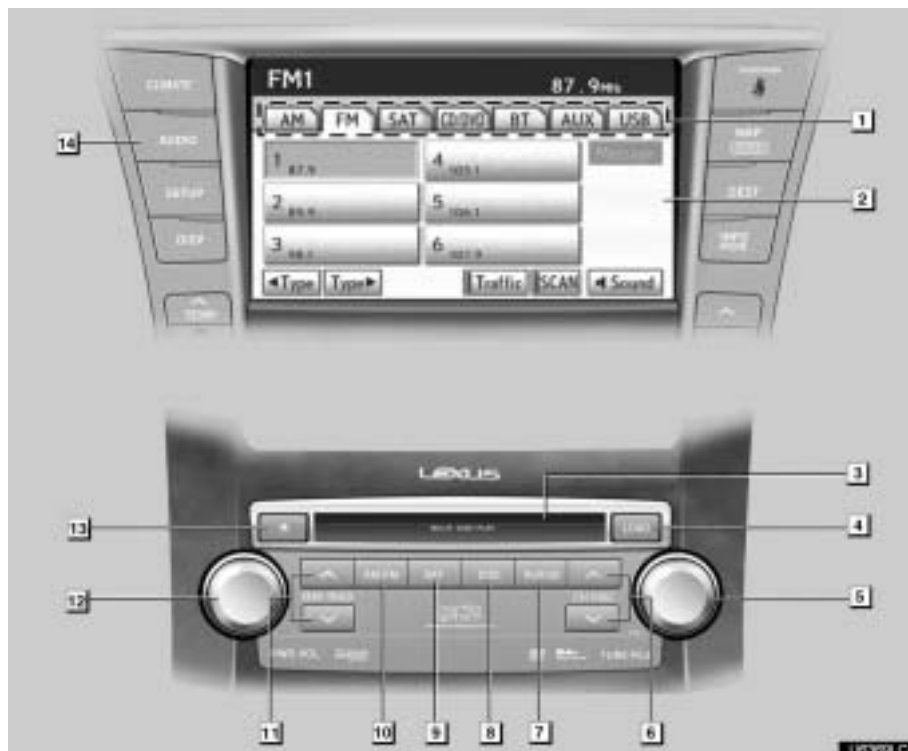

- 1 Function menu tab**
To control the radio, DVD changer, Bluetooth® audio player, AUX, USB memory or iPod, touch the screen tabs. For details, see page 171.
- 2 Function menu display screen**
To control the radio, DVD changer, Bluetooth® audio player, AUX, USB memory or iPod, touch the screen buttons. For details, see page 171.
- 3 Disc slot**
Insert discs into the slot after pushing “**LOAD**” button. For details, see page 192.
- 4 “LOAD” button**
Push this button to insert the discs. For details, see page 192.
- 5 “TUNE-FILE” knob**
Turn this knob to move the station band and files up or down. For details, see pages 176, 179, 189 and 218.
- 6 “CH-DISC” button**
Push the “**^**” or “**v**” button to select a preset station or a selected disc. For details, see pages 176, 180, 193 and 195.

- 7** **“AUX-USB” button**
Push this button to turn the Bluetooth® audio player, AUX, USB memory or iPod on. For details, see pages 171, 175, 209 and 215.
- 8** **“DISC” button**
Push this button to turn the DVD changer on. For details, see pages 171 and 194.
- 9** **“SAT” button**
Push this button to choose a SAT station. For details, see pages 171 and 178.
- 10** **“AM-FM” button**
Push this button to choose a radio station. (AM, FM1, FM2)
For details, see pages 171 and 176.
- 11** **“SEEK-TRACK” button**
Push the “^” or “v” button to seek up or down for a station, or to access a desired track, file or chapter. For details, see pages 176, 180, 186, 189, 199, 206, 214 and 217.
- 12** **“PWR-VOL” knob**
Push this knob to turn the audio system on and off, and turn it to adjust the volume. For details, see page 171.
- 13** **“▲” button**
Push this button to eject the discs. For details, see page 193.
- 14** **“AUDIO” button**
Push this button to display the audio control screen. For details, see page 171.


►DVD changer (Type B)

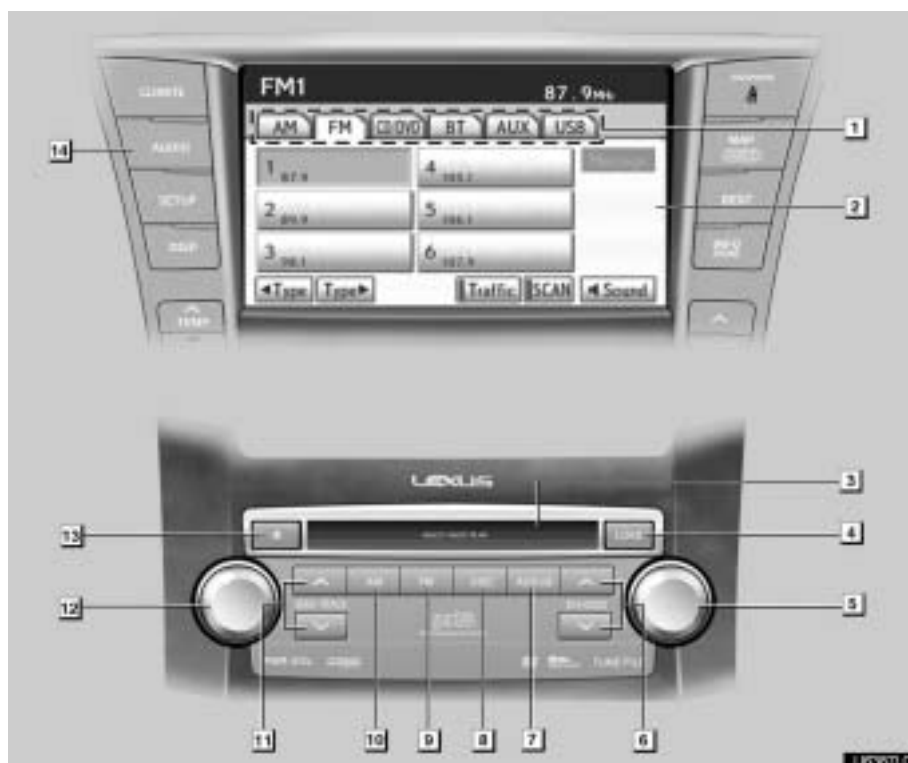

- 1 Function menu tab**
To control the radio, DVD changer, Bluetooth® audio player, AUX, USB memory or iPod, touch the screen tabs. For details, see page 171.
- 2 Function menu display screen**
To control the radio, DVD changer, Bluetooth® audio player, AUX, USB memory or iPod, touch the screen buttons. For details, see page 171.
- 3 Disc slot**
Insert discs into the slot after pushing "LOAD" button. For details, see page 192.
- 4 "LOAD" button**
Push this button to insert the discs. For details, see page 192.
- 5 "TUNE-FILE" knob**
Turn this knob to move the station band and files up or down. For details, see pages 176, 179, 189 and 218.
- 6 "CH-DISC" button**
Push the "▲" or "▼" button to select a preset station or a selected disc. For details, see pages 176, 180, 193 and 195.
- 7 "AUX-USB" button**
Push this button to turn the Bluetooth® audio player, AUX, USB memory or iPod on. For details, see pages 171, 175, 209 and 215.
- 8 "DISC" button**
Push this button to turn the DVD changer on. For details, see pages 171 and 194.

- 9** “**FM**” **button**
Push this button to choose an FM station. For details, see pages 171 and 176.
- 10** “**AM**” **button**
Push this button to choose an AM station. For details, see pages 171 and 176.
- 11** “**SEEK-TRACK**” **button**
Push the “**^**” or “**v**” button to seek up or down for a station, or to access a desired track, file or chapter. For details, see pages 176, 180, 186, 189, 199, 206, 214 and 217.
- 12** “**PWR-VOL**” **knob**
Push this knob to turn the audio system on and off, and turn it to adjust the volume. For details, see page 171.
- 13** “**▲**” **button**
Push this button to eject the discs. For details, see page 193.
- 14** “**AUDIO**” **button**
Push this button to display the audio control screen. For details, see page 171.

►CD changer

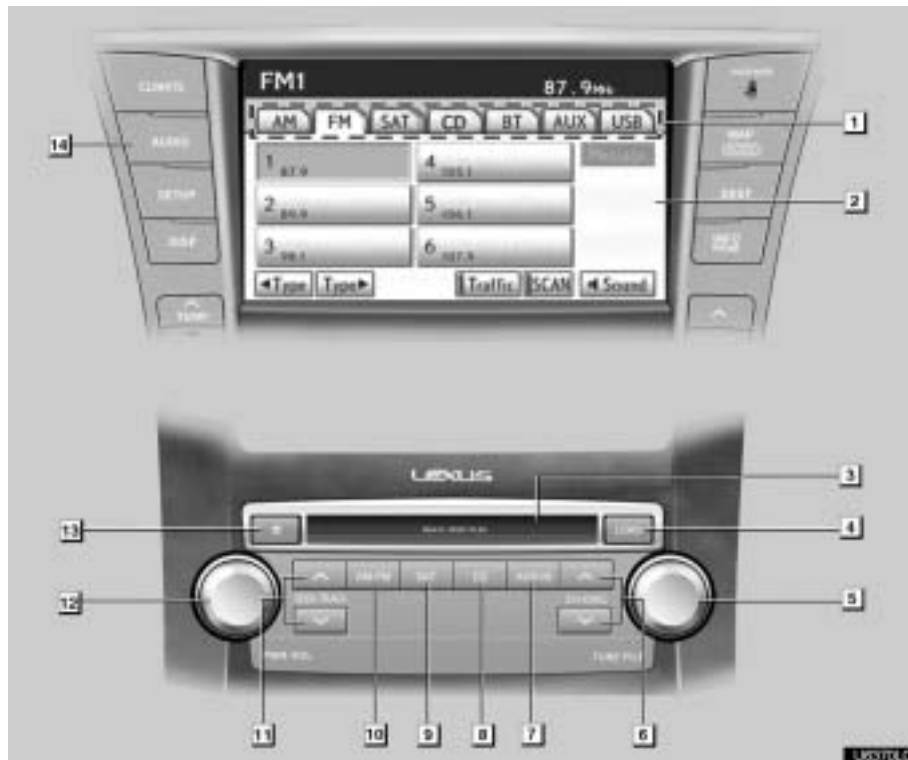

- 1 Function menu tab**
To control the radio, CD changer, Bluetooth® audio player, AUX, USB memory or iPod, touch the screen tabs. For details, see page 171.
- 2 Function menu display screen**
To control the radio, CD changer, Bluetooth® audio player, AUX, USB memory or iPod, touch the screen buttons. For details, see page 171.
- 3 Disc slot**
Insert discs into the slot after pushing “LOAD” button. For details, see page 183.
- 4 “LOAD” button**
Push this button to insert the discs. For details, see page 183.
- 5 “TUNE-FILE” knob**
Turn this knob to move the station band and files up or down. For details, see pages 176, 179, 189 and 218.
- 6 “CH-DISC” button**
Push the “^” or “v” button to select a preset station or a selected disc. For details, see pages 176, 180 and 184.
- 7 “AUX-USB” button**
Push this button to turn the Bluetooth® audio player, AUX, USB memory or iPod on. For details, see pages 171, 175, 209 and 215.
- 8 “CD” button**
Push this button to turn the CD changer on. For details, see pages 171 and 185.

Using your audio/video system — — Some basics

- 9** **“SAT” button**
Push this button to choose a SAT station. For details, see pages 171 and 178.
- 10** **“AM-FM” button**
Push this button to choose a radio station. (AM, FM1, FM2)
For details, see pages 171 and 176.
- 11** **“SEEK-TRACK” button**
Push the “^” or “v” button to seek up or down for a station, or to access a desired track or file. For details, see pages 176, 180, 186, 189, 214 and 217.
- 12** **“PWR-VOL” knob**
Push this knob to turn the audio system on and off, and turn it to adjust the volume. For details, see page 171.
- 13** **“▲” button**
Push this button to eject the discs. For details, see page 184.
- 14** **“AUDIO” button**
Push this button to display the audio control screen. For details, see page 171.

This section describes some of the basic features of your audio/video system. Some information may not pertain to your system.

Your audio/video system works when the “POWER” <“ENGINE START STOP”> switch is turned to ACCESSORY or ON <IGNITION ON> mode.

FCC ID : AJDK021
IC ID : 775E-K021

This device complies with Part 15 of the FCC Rules and RSS-Gen and RSS-210 of IC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



CAUTION

FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.


- **Laser products**

- Do not take this unit apart or attempt to make any changes yourself. This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.
- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


NOTICE

To prevent the 12-volt battery from being discharged, do not leave the audio/video system on longer than necessary when the hybrid system is off <the engine is not running>.

- **SPEECH COMMAND SYSTEM**

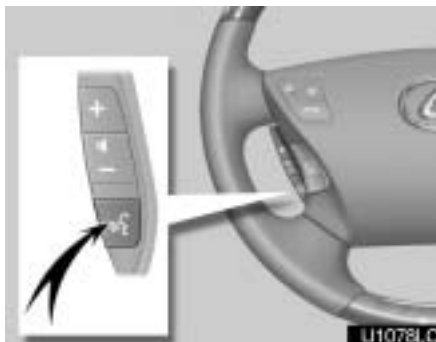

Type A

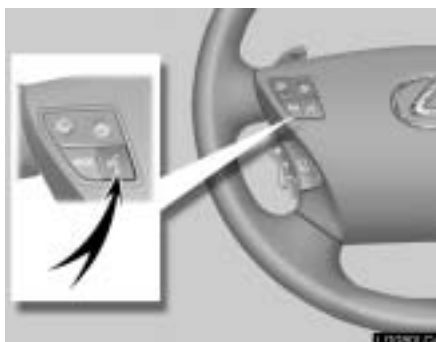

Type B

By pulling or pushing the switch above, you can operate the speech command system.

For the operation of the speech command system and the list of commands, see pages 42 and 46.

• TURNING THE SYSTEM ON AND OFF



“AUDIO”: Push this button to display touch-screen buttons for audio system (audio control mode).

“PWR-VOL”: Push this knob to turn the audio system on and off. Turn this knob to adjust the volume. The system turns on in the last mode used.

You can select the function that enables automatic return to the previous screen from the audio screen. See page 260 for details.

• SWITCHING BETWEEN FUNCTIONS




► DVD changer (Type A) image

Push the “AM-FM”, “AM”, “FM”, “SAT”, “DISC”, “CD” or “AUX-USB” button to turn on the desired mode.

AUDIO/VIDEO SYSTEM

1. Push the “AUDIO” button.


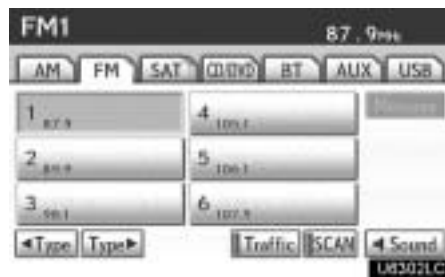




2. Touch “AM”, “FM”, “SAT”, “CD”, “CD/DVD”, “BT”, “AUX” or “USB” tab to turn on the desired mode.

Push these buttons or tabs if you want to switch from one mode to another.

If the disc is not set, the CD changer/DVD changer does not turn on.

You can turn off the CD changer/DVD changer by ejecting a disc.

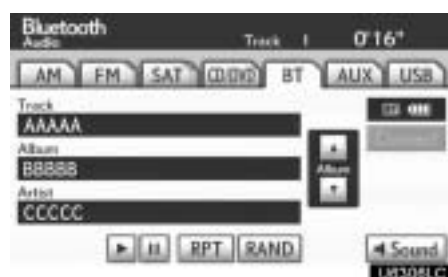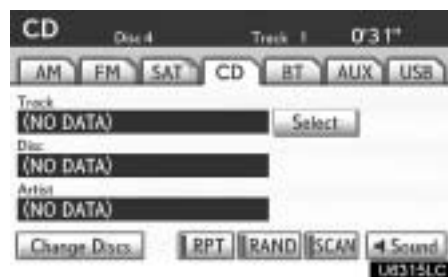

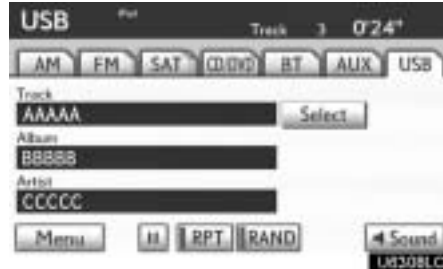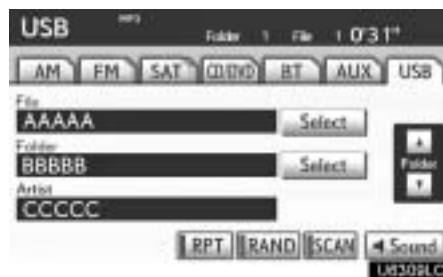

The screen buttons for radio, CD changer, DVD changer, Bluetooth® audio player, AUX, USB memory and iPod operation are displayed on the screen when the audio control mode is selected.

Touch the tab to select the desired mode when the audio control mode is selected.

INFORMATION


You cannot operate dimmed screen buttons.

● DSP CONTROL

1. Push the “AUDIO” button.



2. Touch “Sound”.

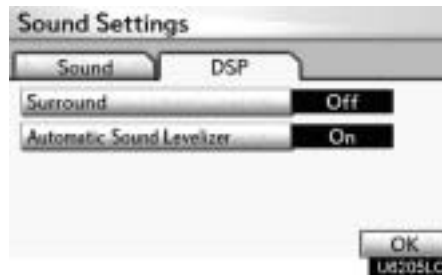

3. Touch “DSP” tab to display this screen.

4. Touch the desired button.

Surround function (if equipped):
Touch “On” of “Surround” and touch “OK”.

The surround function will turn on.

Automatic sound levelizer (ASL) (if equipped):

When the audio sound becomes difficult to hear due to road noise, wind noise or other noises while driving, touch “On”. The system adjusts to the optimum volume and tone quality according to the speed of car, wind noise or other noise.

• TONE AND BALANCE


Tone

How good an audio program sounds to you is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.

Balance

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.

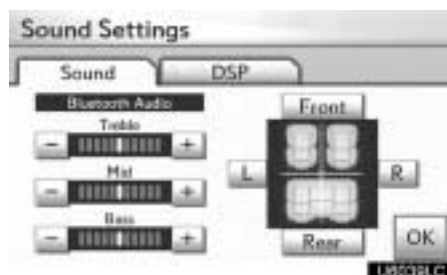

1. Touch "Sound" tab to display this screen.

2. Touch the desired button.

"Treble" "+" or "-": Adjust high-pitched tones.

"Mid" "+" or "-": Adjust mid-pitched tones.

"Bass" "+" or "-": Adjusts low-pitched tones.

"Front" or "Rear": Adjusts sound balance between the front and rear speakers.

"L" or "R": Adjusts sound balance between the left and right speakers.

3. Touch "OK".

The tone of each mode (for such as AM, FM, CD changer and DVD changer) can be adjusted.

• SELECTING SCREEN SIZE (DVD CHANGER ONLY)

Before selecting screen size, it is necessary to insert a DVD disc and select DVD mode.

1. Push the "AUDIO" button.

2. Touch "CD/DVD" tab.



3. Touch "Settings".



4. Touch "Wide".



5. Touch the desired button.

- “**Normal**”: Displays a 3 : 4 screen, with either side in black.
- “**Wide 1**”: Widens the 3 : 4 screen horizontally to fill the screen.
- “**Wide 2**”: Widens the 3 : 4 screen vertically and horizontally, in the same ratio, to fill the screen.

When you touch , the previous screen returns.

6. Touch “OK”.

● **YOUR CD OR DVD CHANGER**

When you insert a disc, push the “**LOAD**” button and gently push the disc in with the label side up. This CD or DVD changer can store up to six discs.

The changer is intended for use with 4.7 in. (12 cm) discs only.



NOTICE

- *Do not stack up two discs for insertion, or it will cause damage to the changer. Insert only one disc into the slot at a time.*
- *Never try to disassemble or oil any part of the changer. Do not insert anything other than a disc into the slot.*

● **AUX PORT**


The sound of portable audio players connected to the AUX port can be enjoyed. Push the “**AUX·USB**” button, or push the “**AUDIO**” button to display audio screen and touch “**AUX**” tab to switch to AUX mode. When the portable audio player is not connected to the AUX port, the tab will tone down. For details, refer to the “*Owner’s Manual*”.

● **USB PORT**

It is available to connect a USB memory/iPod with the USB port. When the USB memory/iPod is not connected with the USB port, the tab will tone down. For details, see “**CONNECTING A USB MEMORY OR iPod**” on page 215.

— Radio operation

● LISTENING TO THE RADIO

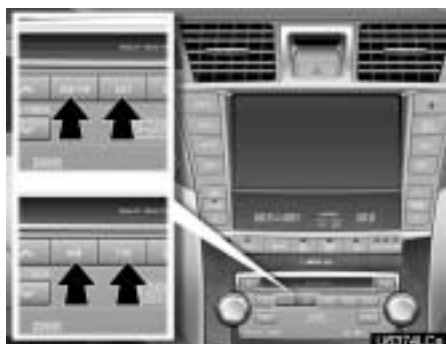

Push the “AM·FM”, “AM” or “FM” button, or push the “AUDIO” button to display audio screen and touch “AM” or “FM” tab to choose either an AM or FM station.

“AM”, “FM1” or “FM2” appears on the screen.

If your vehicle is equipped with a satellite radio broadcast system, when you push the “SAT” button or touch “SAT” tab on audio screen, “SAT1”, “SAT2”, “SAT3” station appears on the display. For details about satellite radio broadcast, see “— Radio operation (XM® Satellite Radio broadcast)” on page 178.



Turn the knob clockwise to step up the station band or counterclockwise to step down.

Your radio automatically changes to stereo reception when a stereo broadcast is received. “ST” appears on the screen. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, “ST” disappears from the screen.

● PRESETTING A STATION



1. Tune in the desired station.

2. Touch one of the buttons (1 — 6) you want and hold it until a beep is heard. This sets the station to the button and the frequency appears on the button.

Each radio mode (AM, FM1 or FM2) can store up to 6 stations. To change the preset station to a different one, follow the same procedure.

The preset station memory is cancelled when the power source is interrupted by 12-volt battery disconnection or a blown fuse.

● SELECTING A STATION

Tune in the desired station using one of the following methods.

Preset tuning: Touch the button (1 — 6) or push the “^” or “v” button of “CH-DISC” for the station you want. The button is highlighted and the station frequency appears on the screen.

Seek tuning: Push the “^” or “v” button of “SEEK·TRACK”. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched automatically one after another.

To scan all the frequencies: Touch “SCAN” briefly. “SCAN” appears on the screen. The radio will find the next station and stay there for a few seconds, and then scan again. To select a station, touch “SCAN” again.

To scan the preset stations: Touch “SCAN” for longer than a second. “P. SCAN” appears on the screen. The radio will tune in the next preset station, stay there for a few seconds, and then move to the next preset station. To select a station, touch “SCAN” again.


• RADIO DATA SYSTEM

Your audio system is equipped with Radio Data Systems (RDS). RDS mode provides you to receive text messages from radio stations that utilize RDS transmitters.

When RDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RDS features are available for use only on FM stations which broadcast RDS information.

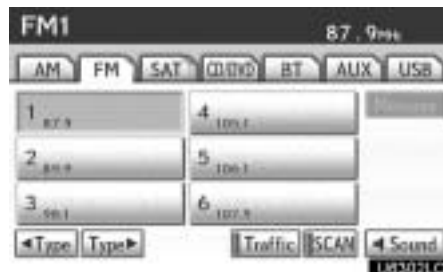

“Type ◀ ▶”

If the system receives no RDS stations, “NO-PTY” appears on the display.

Each time you touch “◀ Type” or “Type ▶”, the program type changes as in the following:

- ROCK
- MISC (Miscellaneous)
- INFORM (Information)
- EASY LIS (Easy listening)
- CLS/JAZZ (Classical music and Jazz)
- R & B (Rhythm and Blues)
- RELIGION
- ALART (Emergency message)



“TypeSeek”

When a program is set, “Type Seek” appears. Touch the button and the system starts to seek the station in the relevant program type.

If any type program station is not found, “Nothing” appears on the display.

“Message”

If the system receives a radio text from RDS station, “MSG” appears on the display. Touch “Message”, and a text message is displayed on the screen. This function is available only when the vehicle is not moving.

When you touch “Message Off”, the display returns.

● **TRAFFIC ANNOUNCEMENT**



“Traffic”

A station that regularly broadcasts traffic information is automatically located.

When you touch **“Traffic”**, “Traf. Seek” appears on the display and the radio will start seeking any traffic program station.

If no traffic program station is found, “Nothing” appears on the display.

If a traffic program station is found, the name for traffic program station is displayed for a while until a traffic announcement is received.

— **Radio operation
(XM® Satellite Radio
broadcast)**

► **DVD changer (Type A) and CD changer**

To listen to a satellite radio broadcast in your vehicle, a subscription to the XM® Satellite Radio service is necessary.

● **HOW TO SUBSCRIBE TO AN XM®
Satellite Radio**

An XM® Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and some Canadian provinces.

How to subscribe

You must enter into a separate service agreement with the XM® Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and optional digital satellite tuner.

For complete information on subscription rates and terms, or to subscribe to the XM® Satellite Radio.

U.S.A. —

Visit on the web at www.xmradio.com or call 1-877-515-3987.

Canada —

Visit on the web at www.xmradio.ca or call 1-877-515-3987.

The XM® Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM® Satellite Radio customer service agreement.

Customers should have their radio ID ready; the radio ID can be found by tuning to “channel 000” on the radio. For details, see “● DISPLAYING THE RADIO ID” below.

All fees and programming are the responsibility of the XM® Satellite Radio and are subject to change.

Satellite tuner technology notice

Lexus's satellite radio tuners are awarded Type Approval Certificates from XM® Satellite Radio Inc. as proof of compatibility with the services offered by the XM® Satellite Radio.

• DISPLAYING THE RADIO ID

Each XM® tuner is identified with a unique radio ID. You will need the radio ID when activating XM® service or when reporting a problem.

If you select the "CH 000" using the "TUNE-FILE" knob, the ID code of 8 alphanumeric characters appears. If you select another channel, display of the ID code is canceled. The channel(000) alternates the display between the radio ID and the specific radio ID code.

• LISTENING TO SATELLITE RADIO



Push the "SAT" button, or push the "AUDIO" button to display audio screen and touch "SAT" tab to choose a SAT channel.

"SAT1", "SAT2" or "SAT3" appears on the screen.



Turn this knob to select the next or previous channel.

If you turn continuously, you can rapidly scroll forward or down through the channels.

• CHANNEL CATEGORY



Touch either "<Type" or "Type>" to go to the next or previous category.

• PRESETTING A CHANNEL

1. Tune in the desired channel.



2. Touch one of the channel selector buttons (1 — 6) and hold it until a beep is heard.

This sets the channels to the button and the name and number of the channel appears on the button.

Each button can store three SAT channels. To change the preset channel to a different one, follow the same procedure.

The preset channel memory is cancelled when the power source is interrupted by 12-volt battery disconnection or a blown fuse.

• SELECTING A CHANNEL

Tune in the desired channel using one of the following methods.

Preset tuning: Touch the channel selector button (1 — 6) or push the “^” or “v” button of “CH-DISC” for the channel you want. The button (1 — 6) is highlighted and channel number appears on the display.


To select channel within the current category: Push the “^” or “v” button of “SEEK-TRACK”. The radio will step up or down the channel within the current channel category.



To scan the currently selected channel category: Touch “SCAN” briefly. “SCAN” appears on the display. The radio will find the next channel in the same channel category, stay there for a few seconds, and then scan again. To select a channel, touch “SCAN” a second time.

To scan the preset channels: Touch “SCAN” and hold it until you hear a beep. “P.SCAN” appears on the display. The radio will find the next preset channel, stay there for a few seconds, and then move to the next preset channel. To select a channel, touch “SCAN” a second time.

• DISPLAYING THE TITLE AND NAME

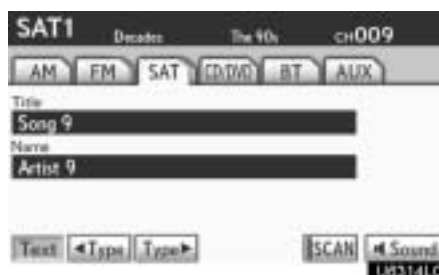

When you touch “Text”, the song/program title and the artist name/feature are displayed.

Up to 16 alphanumeric characters can be displayed. (Some information will not be fully displayed.)

When you touch “Text” again, the display returns.

● IF THE SATELLITE RADIO TUNER MALFUNCTIONS

When problems occur with the XM® tuner, a message will appear on the display. Referring to the table below to identify the problem, take the suggested corrective action.

ANTENNA	The XM® antenna is not connected. Check whether the XM® antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Lexus certified dealer for assistance.
UNAUTH	You have not subscribed to the XM® Satellite Radio. The radio is being updated with the latest encryption code. Contact the XM® Satellite Radio for subscription information. When a contract is canceled, you can choose the "CH000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel. If you want to listen to the premium channel, contact the XM® Satellite Radio.
NO SIGNAL	The XM® signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
LOADING	The unit is acquiring audio or program information. Wait until the unit has received the information.
OFF AIR	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action needed.
CH UNAVL	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel.

Contact the XM® Listener Care Center at 1-877-515-3987.

NOTICE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.*
- Increase the separation between the equipment and receiver.*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- Consult the dealer or an experienced radio/TV technician for help.*

Information to user

Alternation or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

INFORMATION

This XM[®] tuner supports "Audio Services" (Music and Talk) of only XM[®] Satellite Radio and "Text Information" linked to the respective "Audio Services".*

**: Text Information includes, Station Name, (Artist) Name, (Song) Title and Category Name.*

— CD changer operation

• INSERTING DISCS

The “POWER” <“ENGINE START STOP”> switch must be in ACCESSORY or ON <IGNITION ON> mode.

Your CD changer can store up to 6 discs. You can set a disc at the lowest empty disc number.

You can set a disc at the lowest empty disc number.

After insertion, the set disc is automatically loaded.

If the label faces down, the disc cannot be played. In this case, “Check CD” appears on the screen.

If you do not insert the disc within 15 seconds after pushing the “LOAD” button, a beep will sound and the operation will be canceled automatically.

If you need to insert the next disc, repeat the same procedure to insert another disc.

Setting a single disc



1. Push the “LOAD” button briefly.

The orange indicator of the slot starts blinking. After the orange indicator changes to green and stays on, the CD changer door will open.



2. Insert only one disc while the CD changer door is open.

Setting all the discs



1. Push the “LOAD” button until you hear a beep.

The orange indicator of the slot starts blinking. After the orange indicator changes to green and stays on, the CD changer door will open.



2. Insert only one disc while the CD changer door is open.

The CD changer door closes and the orange indicator starts blinking.

3. Insert the next disc after the orange indicator changes to green and stays on and the CD changer door opens.

4. Repeat this procedure until you insert all the discs.

To cancel the operation, push the “LOAD” button briefly.

If you do not insert the discs within 15 seconds after pushing the “LOAD” button, the beep will sound and the operation will be canceled automatically.

NOTICE

Do not insert one disc stacked on top of another one or feed them in continuously, to prevent discs from getting stuck in the changer.

• EJECTING DISCS

A single disc alone



1. Push the “^” or “v” button of “CH-DISC” or touch the disc number button on the “Change Discs” screen to highlight the disc number you want to eject.

To display the “Change Discs” screen, touch “Change Discs” on each audio control screen.



2. Push the “▲” button for the disc briefly.

At this time, the orange indicator of the slot starts blinking and the disc is ejected.

3. After the blinking indicator stays on, remove the disc.

If you do not remove the disc within 15 seconds after it is ejected, the beep will sound and the operation will be canceled automatically.

When all the discs are removed, the indicator goes out.



The numbers of the trays where the disc is not set are dimmed.

Ejecting all the discs



1. Push the “▲” button for the disc until you hear a beep.

At this time, the orange indicator of the slot starts blinking and a disc is ejected.

2. After the blinking indicator stays on, remove the disc.

The indicator starts blinking again and the next disc is ejected.

● **PLAYING A DISC**



Push the “CD” button, or push the “AUDIO” button to display audio screen and touch “CD” tab if the discs are already loaded in the changer.

The discs set in the changer are played continuously, starting with the last disc you inserted. The disc number of the disc currently being played, the track number and the time from the beginning of the program appear on the screen.

AUDIO/VIDEO SYSTEM

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.

The changer will skip any empty disc trays.

• SELECTING A DESIRED DISC



On the screen:

Touch “CD” tab, then touch “Change Discs”.

The selected disc number is highlighted.

The changer will start playing the selected disc from the first track.

On the audio panel:

Push the “^” or “v” button of “CH-DISC”.

When you release the button, the changer will start playing the selected disc from the first track.

• PLAYING AN AUDIO DISC



Touch “CD” tab, then touch “Change Discs”. Choose an audio disc number to display this screen.

Selecting a desired track




“SEEK-TRACK” button: Use for direct access to a desired track.

Push the “^” or “v” button of “SEEK-TRACK” and repeat it until the desired track number appears on the screen. As you release the button, the changer will start playing the selected track from the beginning.

“Select” for Track: The desired track can be selected from a list. This function is available only when the vehicle is not moving.

Touch “Select”. The track list is displayed.

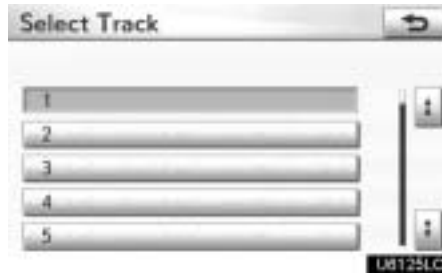

Touch the desired track number. The changer will start playing the selected track from the beginning.



: By touching this button, the list moves up by 5 track groups. If this button is touched when the top page of the list is displayed, the last page is displayed.



: By touching this button, the list moves down by 5 track groups. If this button is touched when the last page of the list is displayed, the top page is displayed.


►, ◀: If ► appears to the right of the item name, the complete name is too long for the display.

Touch ► to scroll to the end of the name. Touch ◀ to scroll the beginning of the name.

Fast forward: Push the “^” button of “SEEK-TRACK” and hold it to fast forward the disc. When you release the button, the changer will resume playing from that position.

Rewind: Push the “v” button of “SEEK-TRACK” and hold it to rewind the disc. When you release the button, the changer will resume playing.

Searching for a desired track or disc

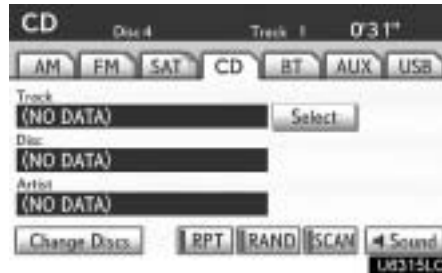

Searching for a desired track —

Touch “SCAN” briefly while the disc is playing.

“SCAN” appears on the screen. The changer will play the next track for 10 seconds, then scan again. To select a track, touch “SCAN” a second time. If the changer reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

Searching for a desired disc —

Touch “SCAN” for longer than a second while the disc is playing.

“D.SCAN” appears on the screen. The program at the beginning of each audio disc will be played for 10 seconds. To continue listening to the program of your choice, touch “SCAN” a second time.

After all the audio discs are scanned in one pass, normal play resumes.

Other functions



“RPT”: Use it for automatic repeat of the track or disc you are currently listening to.

Repeating a track —

Touch **“RPT”** briefly while the track is playing. **“RPT”** appears on the screen. When the track is finished, the changer will automatically go back to the beginning of the track and play the track again. To cancel it, touch **“RPT”** once again.

Repeating a disc —

Touch **“RPT”** for longer than a second while the disc is playing. **“D.RPT”** appears on the screen. When the disc is finished, the changer will automatically go back to the beginning of the disc and play the disc again. To cancel it, touch **“RPT”** once again.

“RAND”: Use it for automatic and random selection.

Playing the tracks on one disc in random order —


Touch **“RAND”** briefly while the disc is playing. **“RAND”** appears on the screen. The system selects a track on the disc being listened to in random order. To cancel it, touch **“RAND”** once again.

Playing the tracks on all the audio discs in random order —

Touch **“RAND”** for longer than a second while the disc is playing. **“D.RAND”** appears on the screen. The system selects a track on all the audio discs in the changer in random order. To cancel it, touch **“RAND”** once again.

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 32 letters can be displayed.

• PLAYING A MP3/WMA DISC

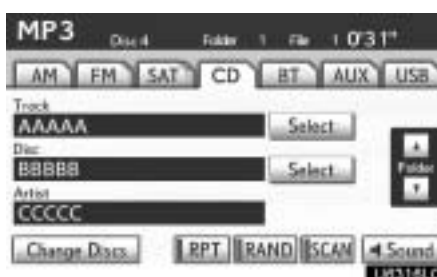

Touch **“CD”** tab, then touch **“Change Discs”**. Choose an MP3/WMA disc number to display this screen.

Selecting a desired folder

“Folder▲”: Touch this button to go to the next folder.

“Folder▼”: Touch this button to go to the previous folder.

“Select” for Folder: The desired folder can be selected in a list. This function is available only when the vehicle is not moving.

Touch **"Select"**. The folder list is displayed.



Touch the desired folder number. The changer will start playing the first file of the selected folder.



: By touching this button, the list moves up by 5 folder groups. If this button is touched when the top page of the list is displayed, the last page is displayed.



: By touching this button, the list moves down by 5 folder groups. If this button is touched when the last page of the list is displayed, the top page is displayed.

Selecting a desired file



"SEEK-TRACK" button: Use for direct access to a desired file.

Push the **"^"** or **"v"** button of **"SEEK-TRACK"** and repeat it until the desired file number appears on the display. As you release the button, the changer will start playing the selected file from the beginning. When **"RAND"** or **"FLD.RPT"** is on, the file number within the folder you are currently listening to appears.


Fast forward: Push the **"^"** button of **"SEEK-TRACK"** and hold it to fast forward the disc. When you release the button, the changer will resume playing from that position.

Rewind: Push the **"v"** button of **"SEEK-TRACK"** and hold it to rewind the disc. When you release the button, the changer will resume playing.




"TUNE-FILE" knob: Use for direct access to a desired file in the disc.

Turn the **"TUNE-FILE"** knob to step up or down all the files in the disc you are currently listening to. The file number appears on the display. When **"RAND"** or **"FLD.RPT"** is on, all the files in the folder you are currently listening to can be stepped up or down.

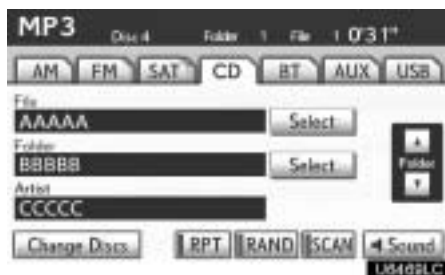



“Select” for File: The desired file can be selected in a list. This function is available only when the vehicle is not moving.

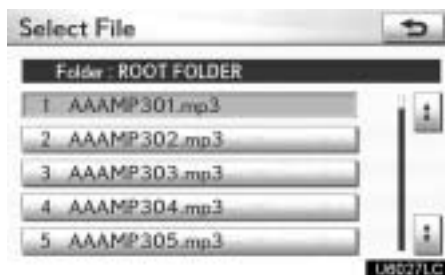Touch **“Select”**. The file list is displayed.




Touch the desired file number. The changer will start playing the selected file from the beginning.

 : By touching this button, the list moves up by 5 file groups. If this button is touched when the top page of the list is displayed, the last page is displayed.

 : By touching this button, the list moves down by 5 file groups. If this button is touched when the last page of the list is displayed, the top page is displayed.

Searching for a desired file

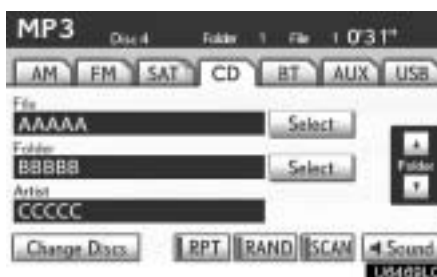


Touch “SCAN” briefly while the disc is playing.

“SCAN” appears on the screen. The changer will play the next file in the folder for 10 seconds, then scan again. To select a file, touch **“SCAN”** a second time. If the changer reaches the end of the folder, it will continue scanning from file 1.

After all the files are scanned in one pass, normal play resumes.


Searching for a desired folder

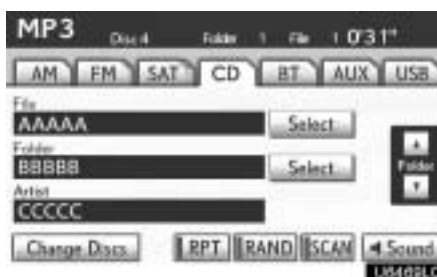

Touch “SCAN” for longer than a second while the disc is playing.

“FLD.SCAN” appears on the screen. The program at the beginning of each folder will be played for 10 seconds. To continue listening to the program of your choice, touch **“SCAN”** a second time.

After all the folders are scanned in one pass, normal play resumes.

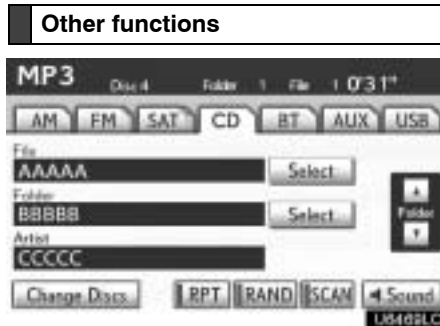

“RPT”: Use it for automatic repeat of the file or folder you are currently listening to.

Repeating a file —

Touch **“RPT”** briefly while the file is playing. **“RPT”** appears on the screen. When the file is finished, the changer will automatically go back to the beginning of the file and play the file again. To cancel it, touch **“RPT”** once again.

Repeating a folder —

Touch **“RPT”** for longer than a second while the folder is playing. **“FLD.RPT”** appears on the screen. When the folder is finished, the changer will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch **“RPT”** once again.

“RAND”: Use it for automatic and random selection of the folder or the disc which you are currently listening to.

Playing the files in one folder in random order —

Touch **“RAND”** briefly while the disc is playing. **“RAND”** appears on the screen. The system selects a file in the folder you are currently listening to. To cancel it, touch **“RAND”** once again.

Playing the files in all the folders on one disc in random order —

Touch **“RAND”** for longer than a second while the disc is playing. **“FLD.RAND”** appears on the screen. The system selects a file in all the folders. To cancel it, touch **“RAND”** once again.

When a file is skipped or the system is in-operative, touch **“RAND”** to reset.

• IF THE CHANGER MALFUNCTIONS

If **“CD error”** appears on the screen, audio signals of the disc cannot be read or the system has trouble. Push the **“CD”** button once again.

If the changer does not operate, check that the disc surface is not soiled or damaged. If the disc is O.K., the temperature of the changer's internal mechanism may be raised because of high external temperature. Remove the disc from the changer to cool it.

If the changer still does not operate, have it checked by your dealer.

If an MP3/WMA disc contains CD-DA files, only CD-DA files are played. If an MP3/WMA disc contains files other than CD-DA, only MP3/WMA files are played.

— DVD changer operation

For safety reasons, you can enjoy DVD video discs, DVD audio discs and video CDs only when the vehicle is completely stopped with the “POWER” <“ENGINE START STOP”> switch is in ACCESSORY or ON <IGNITION ON> mode and the parking brake applied. While you are driving, you can hear audio alone even in the DVD video, DVD audio or video CD mode.

● INSERTING DISCS

The “POWER” <“ENGINE START STOP”> switch must be in ACCESSORY or ON <IGNITION ON> mode.

Your DVD changer can store up to 6 discs.

You can set a disc at the lowest empty disc number.

Setting a single disc



1. Push the “LOAD” button briefly.

The orange indicator of the slot starts blinking. After the orange indicator changes to green and stays on, the DVD changer door will open.



2. Insert only one disc while the DVD changer door is open.

You can set a disc at the lowest empty disc number.

After insertion, the set disc is automatically loaded.

If the label faces down, the disc cannot be played. In this case, “Check disc ×” appears on the screen.

If you do not insert the disc within 15 seconds after pushing the “LOAD” button, a beep will sound and the operation will be canceled automatically.

If you need to insert the next disc, repeat the same procedure to insert another disc.

Setting all the discs



1. Push the “LOAD” button until you hear a beep.

The orange indicator of the slot starts blinking. After the orange indicator changes to green and stays on, the DVD changer door will open.



2. Insert only one disc while the DVD changer door is open.

The DVD changer door closes and the orange indicator starts blinking.

3. Insert the next disc after the orange indicator changes to green and stays on and the DVD changer door opens.

4. Repeat this procedure until you insert all the discs.

To cancel the operation, push the “LOAD” button briefly.

If you do not insert the discs within 15 seconds after pushing the “LOAD” button, the beep will sound and the operation will be canceled automatically.

NOTICE

Do not insert one disc stacked on top of another one or feed them in continuously, to prevent discs from getting stuck in the changer.

● EJECTING DISCS

A single disc alone



1. Push the “^” or “v” button of “CH-DISC” or touch the disc number button on the “Change Discs” screen to highlight the disc number you want to eject.

To display the “Change Discs” screen, touch “Change Discs” on each audio control screen.



2. Push the “▲” button for the disc briefly.

At this time, the orange indicator of the slot starts blinking and the disc is ejected.

3. After the blinking indicator stays on, remove the disc.

The indicator starts blinking again and the next disc is ejected.

If you do not remove the disc within 15 seconds after it is ejected, the beep will sound and the operation will be canceled automatically.

When all the discs are removed, the indicator goes out.



The numbers of the trays where the disc is not set are dimmed.

Ejecting all the discs



1. Push the “▲” button for the disc until you hear a beep.

At this time, the orange indicator of the slot starts blinking and a disc is ejected.

2. After the blinking indicator stays on, remove the disc.

● PLAYING A DISC



Push the “DISC” button, or push the “AUDIO” button to display audio screen and touch “CD/DVD” tab if the discs are already loaded in the changer.

The discs set in the changer are played continuously, starting with the last disc you inserted. The disc number of the disc currently being played, the track or title and chapter number and the time from the beginning of the program appear on the screen.

Audio CD only —

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.

The changer will skip any empty disc trays.

● SELECTING A DESIRED DISC



On the screen:

Touch “CD/DVD” tab, then touch “Change Discs”.

The selected disc number is highlighted.

The changer will start playing the selected disc from the first track.

On the audio panel:

Push the “^” or “v” button of “CH-DISC”.

When you release the button, the changer will start playing the selected disc from the first track.

● OPERATING A DVD DISC

NOTE: The playback condition of some DVD discs may be determined by a DVD software producer. This DVD changer plays a disc as the software producer intended. So some functions may not work properly. Be sure to read the instruction manual for the DVD disc separately provided. For the detailed information about DVD video discs, see “● DVD PLAYER AND DVD VIDEO DISC INFORMATION” on page 207.

Precautions on DVD video disc

When recording with a DVD video or video CD, audio tracks may not record in some cases while the menu is displayed. As audio will not play in this case, verify that the video tracks are playing and then activate playback.

When playback of a disc is completed:

- If an audio CD or MP3 disc is playing, the first track or file starts.
- If a DVD video or video CD is playing, playback will stop or the menu screen will be displayed.

The title/chapter number and playback time display may not appear while playing back certain DVD video discs.



CAUTION

Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.



This screen appears when the video screen is first displayed after the "POWER" <"ENGINE START STOP"> switch is in ACCESSORY or ON <IGNITION ON> mode.

Playing a DVD disc



Touch "CD/DVD" tab to display this screen.

Touch "Settings" on "DVD" screen, then touch "Wide" on "Settings" screen. The screen mode can be changed.

If you touch "Full Screen" when the vehicle is completely stopped and the parking brake is applied, the video screen returns.

DVD settings



► DVD video



► DVD audio

If you touch **“Settings”** on “DVD” screen, “Settings” screen appears.

Description of DVD video settings

“DVD Video Settings”: The initial set up screen appears. (See page 201.)

“Search”: The title search screen appears. (See page 199.)

“Return”: Touching this will display the predetermined scene and start playing from there.

“Audio”: The audio changing screen appears. (See page 200.)

“Subtitle”: The subtitle changing screen appears. (See page 200.)

“Angle”: The angle selection screen appears. (See page 201.)

“Wide”: The screen mode screen appears. (See page 174.)

Description of DVD audio settings

“DVD Audio Settings”: The initial set up screen appears. (See page 201.)

“Search”: The group search screen appears. (See page 199.)

“Return”: Touching this will display the predetermined scene and start playing from there.

“Audio”: The audio changing screen appears. (See page 200.)

“Subtitle”: The subtitle changing screen appears. (See page 200.)

“Angle”: The angle selection screen appears. (See page 201.)

“Wide”: The screen mode screen appears. (See page 174.)

“Prev. Page”: Touch this button to rewind the pages. (See page 200.)

“Next Page”: Touch this button to forward the pages. (See page 200.)

“Select Number”: The track or number search screen appears. (See page 206.)

“RPT”: Touch this button to repeat a track.

“RAND”: Touch this button to play the track in one group in random order.

“SCAN”: Touch this button to play the next track in the group for 10 seconds, then scan again.


Displaying DVD controls

 


► DVD video




► DVD audio


If you touch , while watching video, DVD controls will appear.


If “” appears on the screen when you touch a control, the operation relevant to the control is not permitted.


Description of DVD video controls


“Menu” and “Top Menu”: If you touch any of the above controls, the menu screen for DVD video appears. (For the operation, see the manual that come with the DVD video disc provided separately.)


: The menu control key appears on the screen. (See page 198.)

: Touching this will pause the video screen.

: Touching this will rewind during playback.


: Touching this will stop the video screen.


: Touching this will resume normal play during pause.


: Touching this will fast forward during playback and forward frame by frame during pause.


Description of DVD audio controls


“Top Menu”: If you touch this button, the menu screen for DVD audio appears. (For the operation, see the manual that come with the DVD audio disc provided separately.)


: The menu control key appears on the screen. (See page 198.)

: Touching this will pause the disc.

: Touching this will rewind during playback.

: Touching this will stop the disc.




: Touching this will resume normal play during pause.

: Touching this will fast forward during playback and forward frame by frame during pause.

Selecting a menu item



Enter the menu item using ,

,  and  and touch “Enter”. The player starts playing disc for that menu item. Menu items can also be touched using the pointer. (For details, see the manual that comes with the DVD disc provided separately.)

When you touch the any point on the screen, the controls will disappear. To display them again, touch the any point on the screen.

When you touch , the previous screen returns.


Searching by title



DVD video only —

Enter the title number and touch “OK”. The player starts playing video for that title number.

When you push the “^” or “v” button of “SEEK-TRACK”, you can select a chapter.

If you enter the wrong numbers, touch  to delete the numbers.

When you touch , the previous screen returns.

 
Searching by group




DVD audio only —

Enter the group number and touch “OK”. The player starts playing the disc for that group number.

When you push the “^” or “v” button of “SEEK-TRACK”, you can select a track.

If you enter the wrong numbers, touch  to delete the numbers.

 
When you touch , the previous screen returns.

Selecting the bonus group

DVD audio only —

Enter the bonus group number on the searching group screen and touch “OK”.

The “Enter Key Code” screen will appear. To enter the number of the group you want to play, touch the group number.

If you enter the wrong numbers, touch  to delete the numbers.

When you touch , the previous screen returns.

Touch “OK” on the screen.

The player starts playing the disc from the selected bonus group number.

Changing the page



DVD audio only —


Touch “Prev. Page” or “Next Page” on the screen to forward or rewind the pages.

Changing the subtitle language



Each time you touch “Change”, the language is selected from the ones stored in the discs and changed.

When you touch “Hide”, the subtitle can be hidden.

When you touch , the previous screen returns.

Changing the audio language



DVD video only —

Each time you touch “Change”, the language is selected from the ones stored in the discs and changed.


When you touch , the previous screen returns.

Changing the audio format



DVD audio only —

Each time you touch “Change”, another audio format stored on the disc is selected.

When you touch , the previous screen returns.


Changing the angle



The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

Each time you touch "Change", the angle is selected from the ones stored in the discs and changed.

When you touch , and the previous screen returns.

After you change the initial setting, touch . The initial setting screen will be turned off and return to the picture previously.

When "Default" is touched, all menus are initialized.


The initial setting can be changed.

- Audio language (DVD video only)

You can change the audio language.

1. Touch "Audio Language".
2. Touch the language you want to hear on the "Audio Language" screen.

If you cannot find the language you want to hear on this screen, touch "Other" and enter a language code. For the entry of language code, see the following "Enter audio language code".


To return to the "Setup Menu" screen, touch .

- Subtitle language

You can change the subtitle language.

1. Touch "Subtitle Language".
2. Touch a language you want to read on the "Subtitle Language" screen.

If you cannot find the language you want to read on this screen, touch "Other" and enter a language code. For the entry of language code, see the following "Enter audio language code".

To return to the "Setup Menu" screen, touch .

- DVD language

You can change the language on the DVD video menu.


1. Touch "DVD Language".
2. Touch the language you want to read on the "DVD Language" screen.

Setup menu



There are initial setting buttons on the "Setup Menu" screen.

If you cannot find the language you want to read on this screen, touch **“Other”** and enter a language code. For the entry of language code, see the following “Enter audio language code”.

To return to the “Setup Menu” screen, touch .

- **Angle mark**


The multi-angle mark can be turned on or off on the screen while the disc which is multi-angle compatible is being played.


1. Touch **“Angle Mark”**.
2. Touch **“On”** or **“Off”**.


- **Parental lock (DVD video only)**

The level of viewer restrictions can be changed.

1. Touch **“Parental Lock”**.
2. Enter the 4-digit personal code on the **“Key code”** screen.

If you enter the wrong numbers, touch  to delete the numbers.

To return to the “Setup Menu” screen, touch .

3. Touch a parental level (1 — 8) on the **“Select Restriction Level”**. Touch  to return to the **“Setup Menu”** screen.

- **Auto start**

Discs that are inserted while the vehicle is in motion will automatically start playing. Certain discs may not play.

1. Touch **“Auto Start”**.
2. Touch **“On”** or **“Off”**.

- **Sound dynamic range (DVD video only)**

The difference between the lowest volume and the highest volume can be adjusted.


1. Touch **“Sound Dynamic Range”**.
2. Touch **“MAX”**, **“STD”** or **“MIN”**.

Enter audio language code



If you touch **“Other”** on the **“Audio Language”** screen, **“Subtitle Language”** screen or **“DVD Language”** screen, you can select the language you want to hear or read by entering a language code.

1. Enter the 4-digit language code.

If you enter the wrong numbers, touch  to delete the numbers.

2. Touch **“OK”**.

Code	Language
0514	English
1001	Japanese
0618	French
0405	German
0920	Italian
0519	Spanish
2608	Chinese
1412	Dutch
1620	Portuguese
1922	Swedish
1821	Russian
1115	Korean
0512	Greek
0101	Afar
0102	Abkhazian


0106	Afrikaans	0721	Gujarati
0113	Amharic	0801	Hausa
0118	Arabic	0809	Hindi
0119	Assamese	0818	Croatian
0125	Aymara	0821	Hungarian
0126	Azerbaijani	0825	Armenian
0201	Bashkir	0901	Interlingua
0205	Byelorussian	0905	Interlingue
0207	Bulgarian	0911	Inupiak
0208	Bihari	0914	Indonesian
0209	Bislama	0919	Icelandic
0214	Bengali	0923	Hebrew
0215	Tibetan	1009	Yiddish
0218	Breton	1023	Javanese
0301	Catalan	1101	Georgian
0315	Corsican	1111	Kazakh
0319	Czech	1112	Greenlandic
0325	Welsh	1113	Cambodian
0401	Danish	1114	Kannada
0426	Bhutani	1119	Kashmiri
0515	Esperanto	1121	Kurdish
0520	Estonian	1125	Kirghiz
0521	Basque	1201	Latin
0601	Persian	1214	Lingala
0609	Finnish	1215	Laothian
0610	Fiji	1220	Lithuanian
0615	Faroese	1222	Latvian
0625	Frisian	1307	Malagasy
0701	Irish	1309	Maori
0704	Scots-Gaelic	1311	Macedonian
0712	Galician	1312	Malayalam
0714	Guarani	1314	Mongolian

AUDIO/VIDEO SYSTEM

1315	Moldavian
1318	Marathi
1319	Malay
1320	Maltese
1325	Burmese
1401	Nauru
1405	Nepali
1415	Norwegian
1503	Occitan
1513	(Afan)Oromo
1518	Oriya
1601	Panjabi
1612	Polish
1619	Pashto, Pushto
1721	Quechua
1813	Rhaeto–Romance
1814	Kirundi
1815	Romanian
1823	Kinyarwanda
1901	Sanskrit
1904	Sindhi
1907	Sangho
1908	Serbo–Croatian
1909	Sinhalese
1911	Slovak
1912	Slovenian
1913	Samoaan
1914	Shona
1915	Somali
1917	Albanian
1918	Serbian
1919	Siswati

1920	Sesotho
1921	Sundanese
1923	Swahili
2001	Tamil
2005	Telugu
2007	Tajik
2008	Thai
2009	Tigrinya
2011	Turkmen
2012	Tagalog
2014	Setswana
2015	Tonga
2018	Turkish
2019	Tsonga
2020	Tatar
2023	Twi
2111	Ukrainian
2118	Urdu
2126	Uzbek
2209	Vietnamese
2215	Volapük
2315	Wolof
2408	Xhosa
2515	Yoruba
2621	Zulu

Setup operation from the rear seat

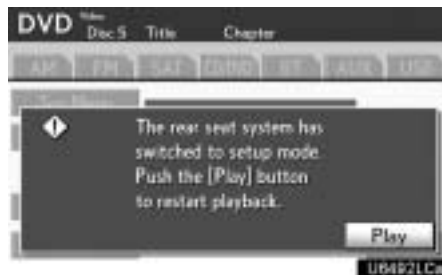

This screen appears when a rear passenger selects the setup menu (vehicles equipped with a rear seat entertainment system only).


Front passengers can cancel this setup operation by touching “**Play**”. The player will resume normal play.

Likewise, a rear passenger can cancel a front passenger’s selection of the setup menu.

To lock the rear seat entertainment system, see “● REAR SYSTEM LOCK” on page 262.

● OPERATING A VIDEO CD

Playing a video CD

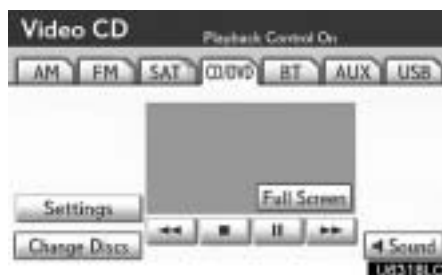


Touch “CD/DVD” tab to display this screen.

When you touch “**Wide**” on “Settings” screen, the screen mode can be changed.

If you touch “**Full Screen**” when the vehicle is completely stopped and the parking brake is applied, the video screen returns.

Displaying video CD settings

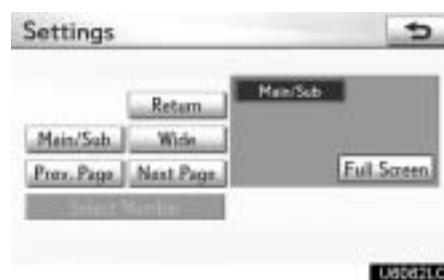

If you touch “**Settings**” on “Video CD” screen, “Settings” screen appears.

Description of video CD settings

“**Select Number**”: The track or number search screen appears. (See “SEARCHING BY TRACK” on page 206.)

“**Prev. Page**”: When you touch this while the disc menu is displayed, the previous page appears on the screen. If you touch this while the player is playing video, the previous track is searched and played.

“**Next Page**”: When you touch this while the disc menu is displayed, the next page appears on the display. If you touch this while the player is playing video, the next track is searched and played.


“**Main/Sub**”: A multiplex transmission changing control. The mode changes from Main/Sub to Main, to Sub and back to Main/Sub by touching this control.

“**Return**”: Touching this will display the predetermined scene and start playing from there.


“**Wide**”: The screen mode screen appears.


Displaying video CD controls

If you touch the part where controls are not located while you are watching video on the video CD, video CD controls will appear.

If “” appears on the display when you touch a control, the operation is not permitted.


You can select a track number by pushing the “^” or “v” button of “SEEK-TRACK”.


If you enter the wrong numbers, touch  to delete the numbers.


Touch , and the previous screen returns.


Description of video CD controls

 : Use this to pause the video screen.

 : Touch this to rewind during playback.

 : Touch this to stop the disc.

 : Touch this to resume playing during pause.

 : Touch this to fast forward during the playback and start playing frame by frame during pause.

Searching by track



Enter the track numbers and touch “OK”. The player starts playing video for that title number.

• IF THE CHANGER MALFUNCTIONS

If the changer or another unit equipped with the changer malfunction, your audio/video system will display following messages.

If “Check disc ×” appears on the display: It indicates that the disc dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. If a disc which is not playable is inserted, “Check disc ×” will also appear on the screen. For appropriate discs for this changer, see “Audio/video system operating hints” on page 249.

If “Region code error” appears on the display: It indicates that the DVD region code is not set properly.

If “DVD error” appears on the display: It indicates that the inside of the player unit may be too hot due to the very high ambient temperature. Remove the disc from the player and allow the player to cool down.

If the malfunction is not rectified: Take your vehicle to your dealer.

If an MP3/WMA disc contains CD-DA files, only CD-DA files are played. If an MP3/WMA disc contains files other than CD-DA, only MP3/WMA files are played.







- DVD PLAYER AND DVD VIDEO DISC INFORMATION

DVD video discs

This DVD player conforms to NTSC color TV formats. The DVD video disc conforming to another formats such as PAL or SECAM cannot be used.

Region codes: Some DVD video discs have a region code indicating a country where you can use the DVD video disc on this DVD player. If the DVD video disc is not labeled as "ALL" or "1", you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, "Region code error" appears on the screen. Even if the DVD video disc does not have a region code, there is a case that you cannot use it.

Marks shown on DVD video discs:

NTSC	Indicates NTSC format of color TV.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
 	Indicates a region code by which this video disc can be played. ALL: in all countries Number: region code

DVD video disc glossary

DVD video discs: Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby Digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help you enjoy the more advanced technology of DVD video.

Viewer restrictions: This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

Level 1: DVD video discs for children can be played.

Level 2 – 7: DVD video discs for children and G-rated movie can be played.

Level 8: All types of the DVD video discs can be played.

Multi-angle feature: You can enjoy the same scene at different angles.

Multi-language feature: You can select a language of the subtitle and audio.

Region codes: The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes, see page 207.

Audio: This DVD player can play liner PCM, Dolby Digital and MPEG audio format DVD. Other decoded type cannot be played.

Title and chapter: Video and audio programs stored in DVD video disc are divided in parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one piece of movie, one album, or one audio program is assigned as a title.

Chapter: The unit smaller than that of title. A title comprises plural chapters.


Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

— Bluetooth® audio operation

The Bluetooth® audio system enables users to enjoy music played on a portable player from the vehicle speaker via wireless communication.

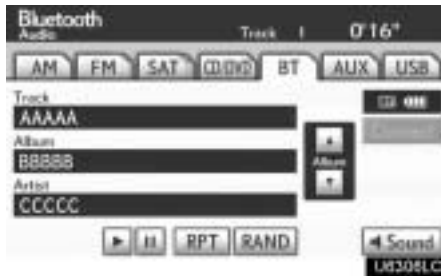

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

INFORMATION

Portable players must correspond to the following specifications in order to be connected to the Bluetooth® audio system. However, please note that some functions may be limited depending on the type of portable player.

- **Bluetooth® Specification**
Ver.1.1 or higher
(Recommended: Ver.2.0 + EDR or higher)
- **Profile**
 - **A2DP (Advanced Audio Distribution Profile)** Ver.1.0 or higher
(Conformed: Ver.1.2)
 - **AVRCP (Audio/Video Remote Control Profile)** Ver.1.0 or higher
(Recommended: Ver.1.3 or higher)

Please go to “<http://www.lexus.com/>” to find approved Bluetooth® phones for this system.



Bluetooth is a trademark owned by Bluetooth SIG, Inc.



CAUTION


Do not operate the player's controls or connect to the Bluetooth® audio system while driving.

NOTICE

Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.

INFORMATION

- In the following conditions, the system may not function.
 - The portable player is turned off.
 - The portable player is not connected.
 - The portable player has a low battery.
- It may take time, the phone connection is carried out during Bluetooth® audio play.

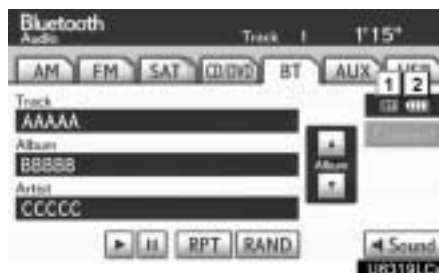

- 1 Indicates the condition of the Bluetooth® connection.

“Blue” indicates an excellent connection to Bluetooth®.

“Yellow” indicates a bad connection to Bluetooth®, resulting in possible deterioration of audio quality.



: No connection to Bluetooth®.



- 2 Indicates the amount of battery charge left.



Empty ← → Full

Remaining charge is not displayed while the Bluetooth® is connecting.

The amount left does not always correspond with the one of your portable player.

This system doesn't have a charging function.

An antenna for the Bluetooth® connection is built in to the instrument panel. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® portable player in the following conditions.

- Your portable player is hiding behind from the display (behind the seat or in the glove box or console box).
- Your portable player touches or is covered with metal materials.

Leave the Bluetooth® portable player in a place where the “Blue” indication is displayed.

The portable player information is registered when the Bluetooth® audio system is connected. When you release possession of your vehicle, remove your portable player. (See “● REMOVING A Bluetooth® AUDIO” on page 308.)

FCC ID : AJDK021
IC ID: 775E-K021

This device complies with Part 15 of the FCC Rules and RSS-Gen and RSS-210 of IC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



CAUTION

FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person’s body (excluding extremities: hands, wrists, feet and ankles).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

● **CONNECTING Bluetooth® AUDIO PLAYER**

To use the Bluetooth® audio system, you need to enter your portable player into the system. Once you have registered it, you can enjoy your music on the vehicle's audio system. (See “—Setting Bluetooth® audio” on page 307.)

For the operation procedure for the portable player, see the instruction manual that comes with it.

When the connection method is “From Vehicle”

- **When the auto connection is on**
When the portable player is standby for the connection, it will be automatically connected whenever the “POWER” <“ENGINE START STOP”> switch is in either ACCESSORY or ON <IGNITION ON> mode.
- **When the auto connection is off**
Manually connect the portable player in accordance with the following procedure.



Touch “Connect”.



When the connection is completed, this screen is displayed. Now you can use the portable player.



This screen will appear when the connection has failed.

When the connection method is “From Portable Player”

Operate the portable player and connect it to the Bluetooth® audio system. For the operation procedure for the portable player, see the instruction manual that comes with it.



Touch “Connect”.



Connect the portable audio player to the Bluetooth® audio system.



This screen will appear when the connection has been successfully established.

Reconnecting the portable player

If the portable player is disconnected with a poor reception from the Bluetooth® network when the “POWER” <“ENGINE START STOP”> switch is in ACCESSORY or ON <IGNITION ON> mode, the system automatically reconnects the portable player.


If the Bluetooth® is disconnected on purpose such as you turned your portable player off, this does not happen.

Reconnect it by the following method.


- Select the portable player again.
- Enter the portable player.


PLAYING A Bluetooth® AUDIO


Playing and pausing a Bluetooth® audio

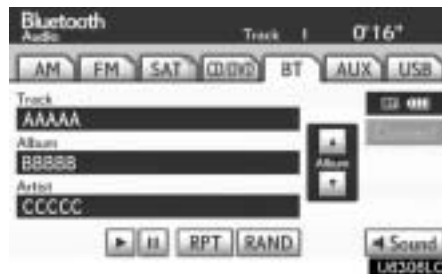



Touch “BT” tab if the Bluetooth® audio player is already connected.


Touch  and the music will start playing.

Touch  and the music will pause.

Touch  and the music will start playing again.

AUDIO/VIDEO SYSTEM

Depending on the portable player that is connected to the system, the music may start playing when touching  while it is paused. On the other hand, the music may pause when touching  while it is playing.

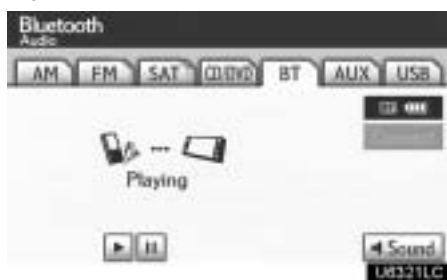

Some titles may not be displayed depending on the type of portable player.

Selecting a desired track



“SEEK-TRACK” button: Use for direct access to a desired track.

Push the “^” or “v” button of “SEEK-TRACK” and repeat it until the desired track number appears on the screen. As you release the button, the portable player will start playing the selected track from the beginning.

Fast forward:

Push and hold the “^” button of “SEEK-TRACK” to fast forward the player. When you release the button, the portable player will resume playing from that position.


Rewind:

Push and hold the “v” button of “SEEK-TRACK” to rewind the player. When you release the button, the player will resume playing.

INFORMATION

Depending on the portable player that is connected to the system, certain functions may not be available.

Selecting a desired album

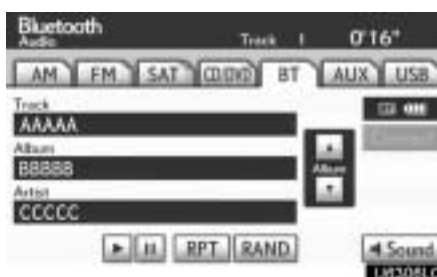


“Album ▲”: Touch this button to go to the next album.

“Album ▼”: Touch this button to go to the previous album.

INFORMATION

Depending on the portable player that is connected to the system, certain functions may not be available.

Other function

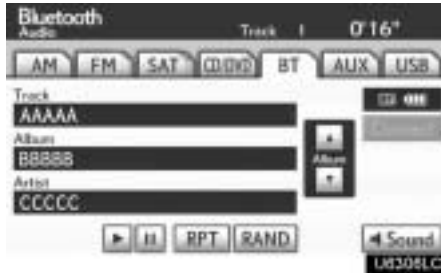

“RPT”: Use this control to automatic re-play the track you are currently listening to.

Repeating a track —

While the track is playing, touch “RPT” briefly.

“RPT” appears on the screen. When the track is finished, the player will automatically play it again. To cancel the repeat, touch “RPT” once again.

“RAND”: Use this for automatic and random selection of tracks on the album that you are currently listening to.

Playing the tracks in the album in random order —

While the track is playing, touch “RAND” briefly.

“RAND” appears on the screen. The system selects a track in the album you are currently listening to. To cancel this function, touch “RAND” once again.

INFORMATION

Depending on the portable player that is connected to the system, certain functions may not be available.

— USB memory/iPod operation

Connecting a USB memory or iPod enables you to enjoy music from the vehicle speakers.




CAUTION

Do not operate the player's controls or connect to the USB memory or iPod while driving.

NOTICE

- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

• CONNECTING A USB MEMORY OR iPod

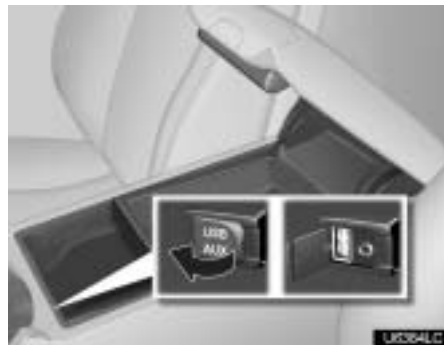


Open the cover and connect a USB memory or iPod using an iPod cable.

Turn on the power of the USB memory or iPod if it is not turned on.

• PLAYING A USB MEMORY OR iPod

Playing and pausing a file or track

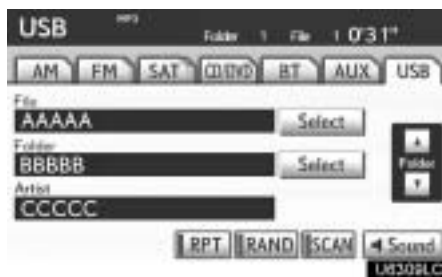



► USB memory




► iPod

Touch “USB” tab to display this screen if the USB memory or iPod are already connected.

Touch  and the music will start playing.


Touch  and the music will pause.

Touch  and the music will start playing again.

INFORMATION

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- When the USB memory is connected and the audio source is changed to USB memory mode, the USB memory will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume play from the same point in which it was last used.
- Depending on the iPod or USB memory that is connected to the system, certain functions may not be available.

Selecting a play mode (iPod only)

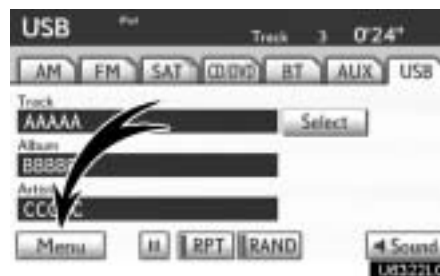


1. Touch “Menu”.



2. Touch the desired play mode.

Selecting a desired folder (USB memory only)

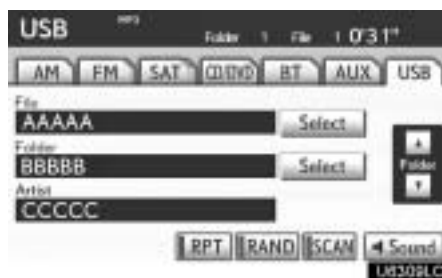


“Folder▲”: Touch this button to go to the next folder.

 
“Folder▼”: Touch this button to go to the previous folder.

“Select” for Folder: The desired folder can be selected in a list. This function is available only when the vehicle is not moving.

Touch **“Select”**. The folder list is displayed.

Touch the desired folder number. The system will start playing the first file of the selected folder.

 : By touching this button, the list moves up by 5 folder groups. If this button is touched when the top page of the list is displayed, the last page is displayed.

 : By touching this button, the list moves down by 5 folder groups. If this button is touched when the last page of the list is displayed, the top page is displayed.

Selecting a desired file or track



“SEEK-TRACK” button: Use for direct access to a desired file or track.

Push the “^” or “v” button of “SEEK-TRACK” and repeat it until the desired file or track appears on the screen. As you release the button, the USB memory or iPod will start playing the selected file or track from the beginning.

Fast forward:

Push and hold the “^” button of “SEEK-TRACK” to fast forward the player. When you release the button, the player will resume playing from that position.

Rewind:

Push and hold the “v” button of “SEEK-TRACK” to rewind the player. When you release the button, the player will resume playing.




“TUNE-FILE” knob: Use for direct access to a desired file or track in the player.

Turn the “TUNE-FILE” knob to step up or down all the files or tracks in the player you are currently listening to.




► USB memory

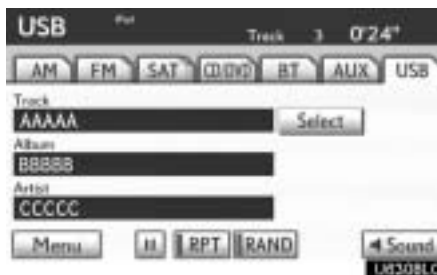

► iPod

“Select” for File or Track: The desired file or track can be selected in a list. This function is available only when the vehicle is not moving.

Touch “Select”. The file or track list is displayed.

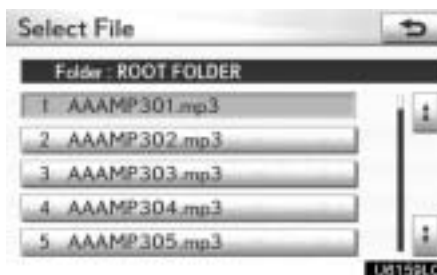

Touch the desired file or track number. The system will start playing the selected file or track from the beginning.




: By touching this button, the list moves up by 5 file or track groups. If this button is touched when the top page of the list is displayed, the last page is displayed.



: By touching this button, the list moves down by 5 file or track groups. If this button is touched when the last page of the list is displayed, the top page is displayed.

Searching for a desired file (USB memory only)

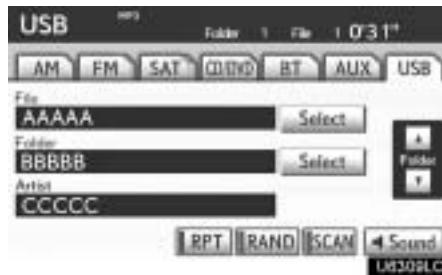


Touch "SCAN" briefly while the music is playing.

"SCAN" appears on the screen. The player will play the next file for 10 seconds, then scan again. To select a file, touch "SCAN" a second time. If the player reaches the end of the memory, it will continue scanning at file1.

After all the files are scanned in one pass, normal play resumes.

Searching for a desired folder (USB memory only)

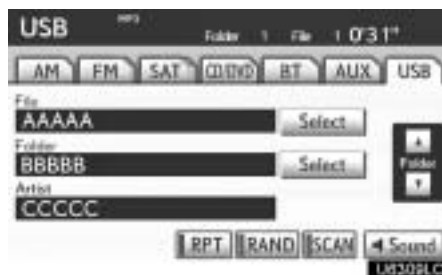


Touch "SCAN" for longer than a second while the music is playing.


"FLD.SCAN" appears on the screen. The program at the beginning of each folder will be played for 10 seconds. To continue listening to the program of your choice, touch "SCAN" a second time.

After all the folders are scanned in one pass, normal play resumes.

Other function

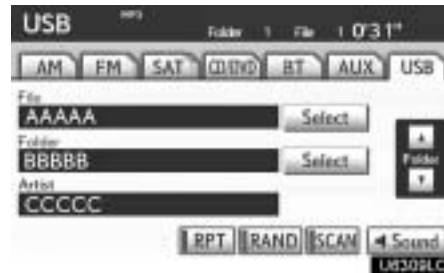

► **USB memory**

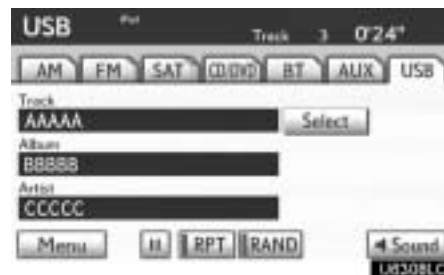

► **iPod**

"RPT": Use this control to automatic replay the file or track you are currently listening to.

Repeating a file or track —

While the file or track is playing, touch "RPT" briefly.

"RPT" appears on the screen. When the file or track is finished, the player will automatically play it again. To cancel the repeat, touch "RPT" once again.

Audio/video remote controls — — Steering switches

Repeating a folder (USB memory only)

While the folder is playing, touch “RPT” for longer than a second.

“FLD.RPT” appears on the screen. When the folder is finished, the system will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch “RPT” once again.

“RAND”: Use this for automatic and random selection of files or tracks on the folder that you are currently listening to.

Playing the file or track in random order

While the file or track is playing, touch “RAND” briefly.

“RAND” appears on the screen. The system selects a file or track you are currently listening to. To cancel this function, touch “RAND” once again.

Playing the files in all files in random order

Touch “RAND” for longer than a second while the music is playing. “FLD.RAND” appears on the screen. The system selects a file in all files. To cancel it, touch “RAND” once again.

When a file is skipped or the system is inoperative, touch “RAND” to reset.



Type A



Type B

Some parts of the audio system can be adjusted using the switches on the steering wheel.

Details of the specific switches, controls, and features are described below.

- 1** Volume control switch
- 2** “^ v” switch
- 3** “MODE” switch

1 Volume control switch

Pull or push “+” side to increase the volume. The volume continues to increase while the switch is being pulled or pressed.

Pull or push “-” side to decrease the volume. The volume continues to decrease while the switch is being pulled or pressed.

2 “^ \” switch

Radio

This switch has the following features —

To select a preset station:

Quickly push and release the “^” or “\” side of the switch. Do this again to select the next preset station.

To seek a station:

Push and hold the “^” or “\” side of the switch until you hear a beep. Do this again to find the next station. If you push the switch on either side during the seek mode, seeking will be cancelled.

To step up or down the frequency, push and hold the switch even after you hear a beep. When you release from the switch, the radio will begin seeking up or down for a station. Do this again to find the next station.

XM® Satellite Radio —

To select a preset channel, push the “^” or “\” side of the switch. Repeat until a desired channel is found.

CD changer or DVD changer

Use this switch to skip up or down to a different track, file or chapter in either direction.

To select a desired track, file or chapter: Quickly push and release the “^” or “\” side of the switch until the track, file or chapter you want to play is set. If you want to return to the beginning of the current track, file or chapter, push the “\” side of the switch once, quickly.

To select a desired disc:

Push and hold the “^” or “\” switch until you hear a beep to change to the next or the previous disc. Repeat this operation until you reach the disc you want to listen to.

Bluetooth® audio player

Use this switch to skip up or down to a different track or album in either direction.

To select a desired track:

Quickly push and release the “^” or “\” side of the switch until the track you want to listen to is set. If you want to return to the beginning of the current track, push the “\” side of the switch once quickly.

To select a desired album:

Push and hold “^” or “\” switch until you hear a beep to change to the next or the previous album. Repeat this operation until you reach the album you want to listen to.

USB memory/iPod

Use this switch to skip up or down to a different file or track in either direction.

To select a desired file or track:

Push the “^” or “\” side of the switch until the file or track you want to listen to is set. If you want to return to the beginning of the current file or track, push the “\” side of the switch once quickly.

To select a desired folder (USB memory only):

Push and hold “^” or “\” switch until you hear a beep to change to the next or the previous folder. Repeat this operation until you reach the folder you want to listen to.


3 “MODE” switch

Push “MODE” switch to select an audio mode. Each push changes the mode sequentially if the desired mode is ready to use.


To turn the audio/video system on, push the “MODE” switch.

To turn the audio/video system off, push and hold the “MODE” switch until you hear a beep.

— Rear armrest switches

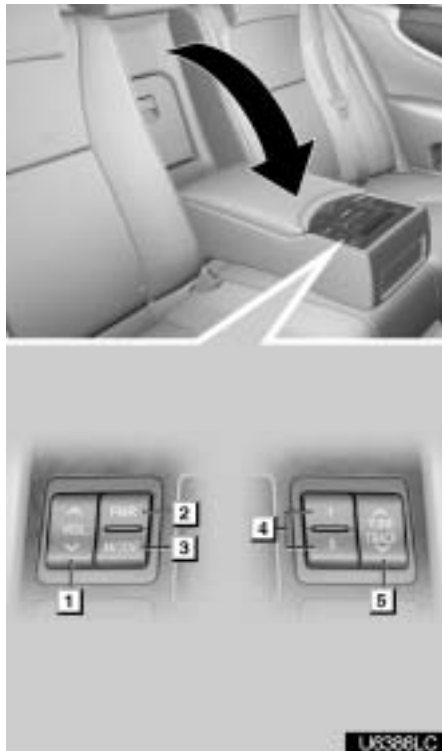

► 5-seat models

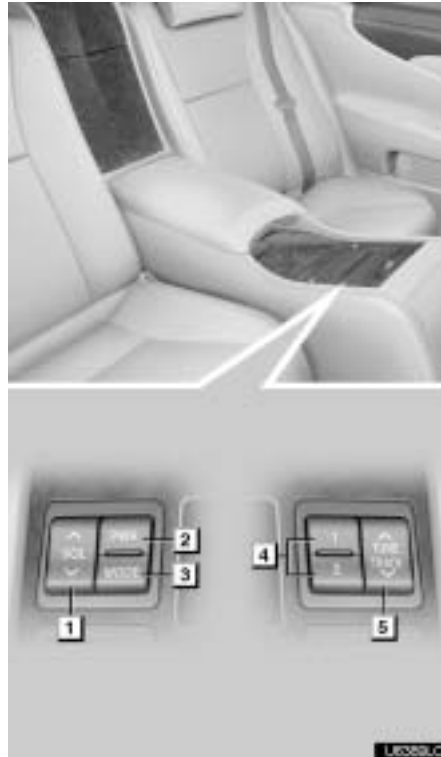

► 4-seat models

Some parts of the audio/video system can be operated using the switches on the rear armrest.

To use the switches, pull the rear armrest forward and down.

Details of the specific switches, controls, and features are described below.

1 “VOL” switch

Push the “^” side to increase the volume. The volume continues to increase while the switch is being pressed.

Push the “v” side to decrease the volume. The volume continues to decrease while the switch is being pressed.

2 “PWR” switch

Push the “PWR” switch to turn the audio/video system on and off.

3 “MODE” switch

Push the “MODE” switch briefly to select an audio mode. Each push changes the mode sequentially if the desired mode is ready to use.

The rear armrest switches can be locked. Push and hold the “MODE” switch until you hear a beep. Pushing and holding the “MODE” switch again until you hear a beep releases the lock.

4 “1” and “2” switches

Radio and Satellite radio

Push the “1” switch to select a preset station. Do this again to select the next preset station.

CD changer and DVD changer

Push the “1” switch to change to the next disc. Repeat this operation until you reach the disc you want to listen to.

Push the “2” switch to change to the next folder when a MP3/WMA disc is playing. Repeat this operation until you reach the folder you want to listen to.

5 “TUNE/TRACK” switch

Radio

Push the “^” or “v” side of the switch to change to the next or previous frequency. Repeat this operation until you reach the frequency you want to listen to.

Push and hold the “^” or “v” side of the switch until you hear a beep to seek a station. Do this again to find the next station. If you push the switch on either side during the seek mode, seeking will be cancelled.

To step up or down the frequency, push and hold the switch even after you hear a beep. When you release from the switch, the radio will begin seeking up or down for a station. Do this again to find the next station.

Satellite radio

Push the “^” or “v” side of the switch to change to the next or previous channel. Repeat this operation until you reach the channel you want to listen to.

Push and hold the “^” or “v” side of the switch until the channel you want to listen to is set.

CD changer, DVD changer and Bluetooth® audio player

This switch has the following features —

To skip to a different track, file or chapter in either direction:

Quickly push and release the “^” or “v” side of the switch until the track, file or chapter you want to play is set. If you want to return to the beginning of the current track, file or chapter, push the “v” side of the switch once, quickly.


To fast-forward or rewind:

Push and hold the “^” or “v” side of the switch until you hear a beep. When you release the switch, the player will resume playing.

Rear seat entertainment system features —


The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video.

►5-seat models (with rear DVD player)

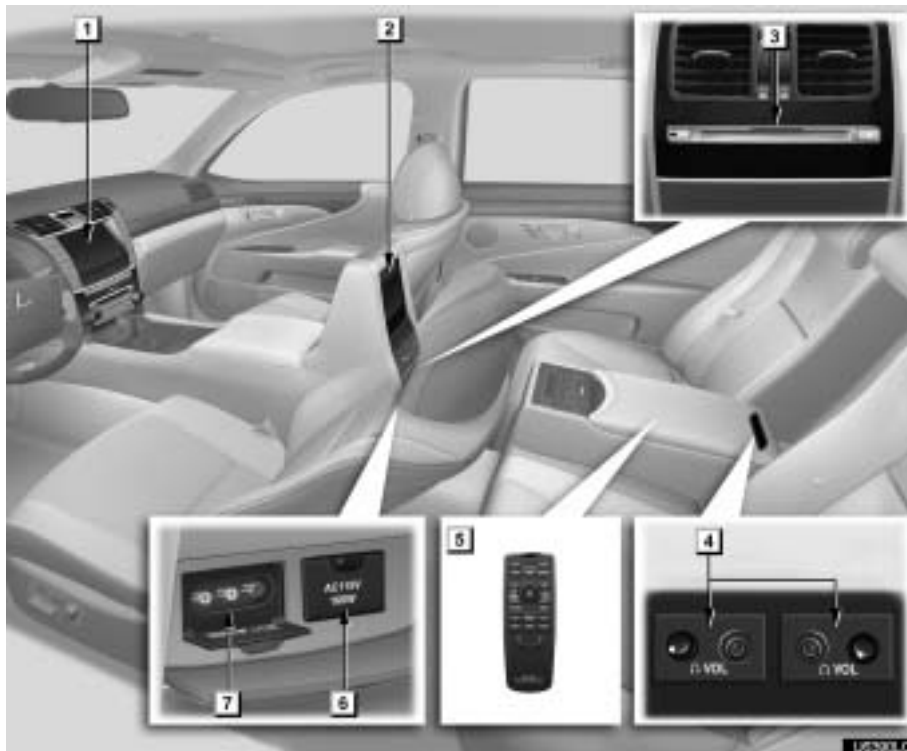

- | | |
|---|--|
| 1 Front audio system | 5 Rear seat entertainment system controller |
| 2 Display | 6 Power outlet (if equipped) |
| 3 Rear DVD player | 7 A/V input port |
| 4 Headphone volume control dials and headphone jacks | |

► 5-seat models (without rear DVD player)

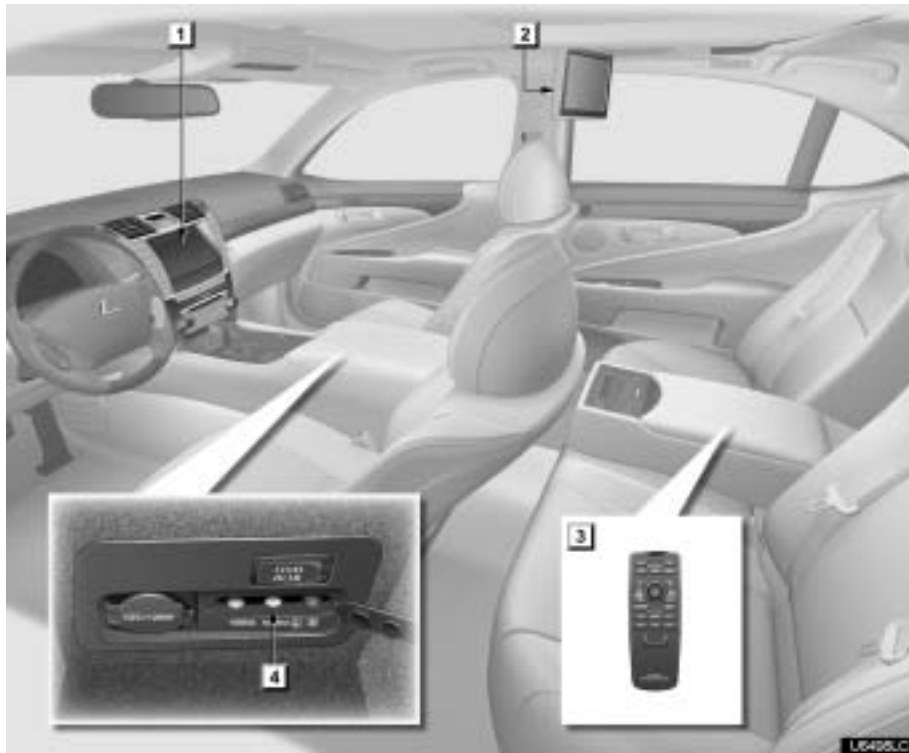

1 Front audio system


2 Display

3 Rear seat entertainment system controller

4 A/V input port

AUDIO/VIDEO SYSTEM

►4-seat models

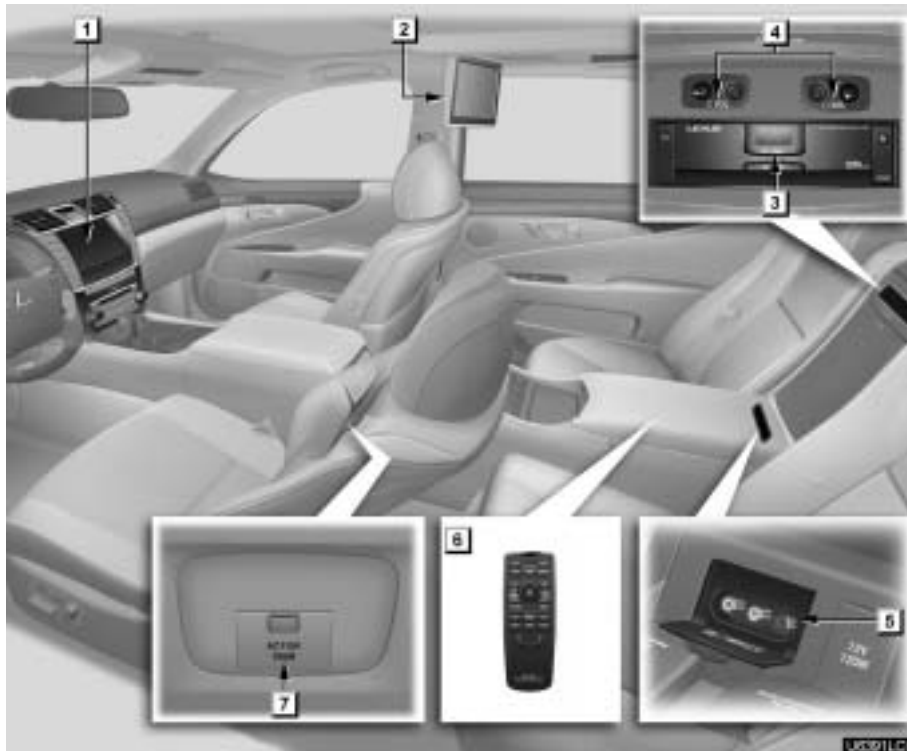

- | | |
|--|---|
| 1 Front audio system | 5 A/V input port |
| 2 Display | 6 Rear seat entertainment system controller |
| 3 Rear DVD player | 7 Power outlet (if equipped) |
| 4 Headphone volume control dials and headphone jacks | |

The rear seat entertainment system can be used when the "POWER" <"ENGINE START STOP"> switch is in ACCESSORY or ON <IGNITION ON> mode.

- **REAR SEAT ENTERTAINMENT SYSTEM CONTROLLER**



To use the buttons under the cover, slide the cover down.

- **BEFORE USING THE CONTROLLER (FOR NEW VEHICLE OWNERS)**



An insulating sheet is set to prevent the batteries from being discharged. Remove the insulating sheet before using the remote control.

- **REPLACING THE CONTROLLER BATTERIES**

Necessary item for replacing "2 AA batteries".



1. Remove the cover.



2. Remove the depleted batteries and install the new ones.

If the batteries are discharged, the following symptoms may occur.

- The rear seat entertainment system controller will not function properly.
- The operational range is reduced.

When using 2 AA batteries

- Batteries can be purchased at your Lexus dealer, electric appliance shop, or camera stores.
- Replace only with the same or equivalent type recommended by a Lexus dealer.
- Dispose of used batteries according to the local laws.

• HEADPHONE JACKS (WITH REAR DVD PLAYER)



► 5-seat models



► 4-seat models

- 1 To use the headphones, connect them to the jack.

- 2 To adjust the volume

Turn the knob clockwise to increase the volume. Turn the knob counterclockwise to decrease the volume.

• HEADPHONES

With some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.

Please contact your Lexus dealer for further details.

• VOLUME

Adjust the volume when you connect the headphones to the jack. Loud sounds may have a significant impact on the human body.

• TURNING ON OR OFF THE DISPLAY (CONSOLE DISPLAY)

To turn the display screen on, push "ON", "DVD", "VIDEO" or "SOURCE".

To turn the display screen off, push "OFF".

Turning on or off operations can be performed from the front seat. (See page 30.)

• OPENING AND CLOSING THE DISPLAY (OVERHEAD DISPLAY)



To open the display, push “OPEN/CLOSE”, “ON”, “SOURCE”, “DVD”, “VIDEO”, or “MAP”.

To close the display, push “OPEN/CLOSE” or “OFF”.


If the display is closed with an image shown, the image will automatically turn off. (When you push “OPEN/CLOSE”, the sound will not be turned off.)

Jam protection —

The display will stop closing and return to its previous position if something gets in the way of it closing.

Opening and closing operations can be performed from the front seat. (See page 30.)

• TILTING THE DISPLAY (OVER-HEAD DISPLAY)

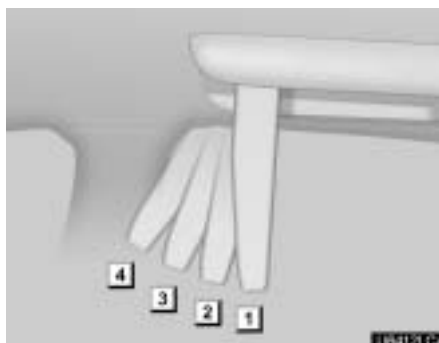

Pushing “TILT” changes the display angles sequentially as follows:

1 → 2 → 3 → 4 → 1

The display angle is memorized and will be recalled when the “POWER” <“ENGINE START STOP”> switch is turned to ACCESSORY or ON <IGNITION ON> mode again.

• CAUTION SCREEN



► Console display

This screen appears for a few seconds when the “POWER” <“ENGINE START STOP”> switch is in ACCESSORY or ON <IGNITION ON> mode.

AUDIO/VIDEO SYSTEM



► Overhead display

This screen appears for a few seconds when the rear display turns on.

● CHANGING THE SOURCE



- 1 Turning on the audio source selection screen
- 2 Inputting the selected icon
- 3 Selecting an icon

Push “SOURCE” to display the audio source selection screen.



Select an audio source.

● CHANGING THE SPEAKER OUTPUT



To play the rear audio over the speakers in the vehicle, turn “Speaker Output” on.



Push “+” or “-” of “VOL” to adjust the speakers’ volume.



CAUTION

- **While driving**
Do not use headphones. Doing so may cause an accident, resulting in death or serious injury.
- **When the rear seat entertainment system is not used (Overhead display only)**
Keep the display closed. In the event of an accident or sudden braking, the opened display may hit an occupant's body, resulting in injury.
- **To prevent accidents and electric shock**
Do not disassemble or modify the remote control.
- **When the remote control is not used**
Stow the remote control. Injuries may result in the event of an accident or sudden braking.
- **When you close the display (Overhead display only)**
Never use any part of your body to intentionally activate the jam protection function.
- **Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.**

- **Removed battery and other parts:**
 - Keep away from children.
 - These parts are small and if swallowed by a child they can cause choking.

NOTICE

- **Cleaning the display**
Wipe the display with a dry soft cloth.
If the screen is wiped with a rough cloth, the surface of the screen may be scratched.
- **To prevent damage to the remote control**
Keep the remote control away from direct sunlight, temperature heat and high humidity.
Do not drop or knock the remote control against hard objects.
Do not sit on or place heavy objects on the remote control.
- **DVD player**
Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.
- **Closing the display (Overhead display)**
Do not close the display using your hand. Doing so may result in a malfunction.

- *For normal operation after replacing the battery, observe the following precautions to prevent accidents:*
- *Always work with dry hands. Moisture may cause the battery to rust.*
- *Do not touch or move any other components inside the remote control.*
- *Do not bend either of the battery terminals.*

— Using the radio



Select radio mode on the source screen to display the control screen.



- 1 Selecting a preset station
- 2 Tuning the station

• SELECTING A PRESET STATION

Push “**^**” or “**v**” of “**CH/DISC**” until the desired station band appears on the screen.

• TUNING THE STATION

Push **[<=<]** or **[>=>]** until the desired station appears on the screen.

Push and hold **[<=<]** or **[>=>]** and the stations will be searched automatically.

— Using the front DVD player

• PLAYING A DISC



- 1 Turning on DVD player mode
- 2 Selecting a disc

Push “DVD”, or select “CD/DVD” on the source screen to display the control screen.

• SELECTING A DISC




Push “^” or “v” of “CH/DISC” until the desired disc number appears on the screen.

- Audio CD, CD text 236
- MP3/WMA disc 236
- DVD video/audio 237
- Video CD 244

— Using the rear DVD player (if equipped)

• LOADING A DISC

► 5-seat models

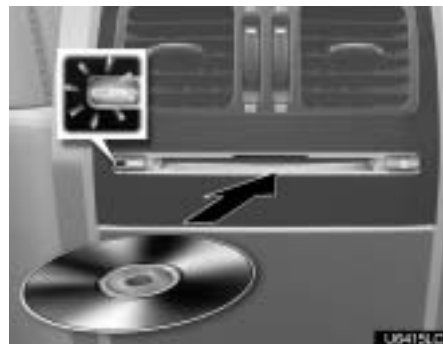

Insert the disc into the slot with the label side up.

The “DISC” indicator light turns on while the disc is loaded.

The player will play the track or chapter, and will repeat it after it reaches the end.

►4-seat models



1. Open the cover.



2. Insert the disc into the slot with the label side up.


The "DISC" indicator light turns on while the disc is loaded.

The player will play the track or chapter, and will repeat it after it reaches the end.

3. Close the cover.

● EJECTING A DISC

►5-seat models

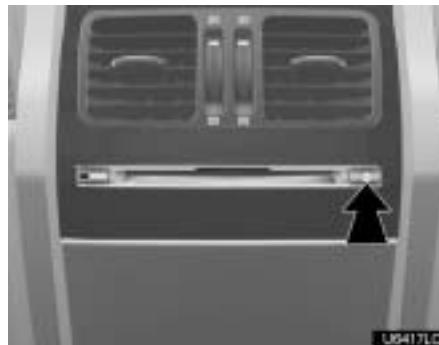

Push ▲ and remove the disc.

► 4-seat models



1. Open the cover.



2. Push ▲ and remove the disc.
3. Close the cover.

● PLAYING A DISC



Push "DVD", or select "Rr-DVD" on the source screen to display the control screen.

- Audio CD, CD text 236
- MP3/WMA disc 236
- DVD video/audio 237
- Video CD 244

— Playing an audio CD/CD text

• SELECTING A TRACK



Push **⏮** or **⏭** until the desired track number appears on the screen.

• FAST FORWARDING OR REWINDING A TRACK

Push and hold **⏮** or **⏭**.

— Playing MP3/WMA discs

• SELECTING A FILE



- 1 Selecting a file
- 2 Selecting a folder



Push **⏮** or **⏭** until the desired file number appears on the screen.

• SELECTING A FOLDER

Push “^” or “v” of “FOLDER” until the desired folder number appears on the screen.

• FAST FORWARDING OR REWINDING A FILE

Push and hold **⏮** or **⏭**.

— Playing DVD video/audio

● CONTROLLER



- 1 Inputting the selected icon
- 2 Selecting an icon
- 3 Playing/pausing a disc
- 4 Turning on the menu disc
- 5 Fast forwarding a disc
- 6 Stopping a screen
- 7 Turning on the control icon screen
- 8 Push to select a chapter/track
Push and hold to fast forwarding or
rewinding a chapter/track
- 9 Rewinding a disc
- 10 Turning on the title selection screen
- 11 Turning on the DVD mode

• DVD VIDEO AND DVD AUDIO

Push **“OPTION”** if no icons are shown while watching a DVD video or DVD audio, and following screens appear.




► DVD video



► DVD audio

“Settings”: Selecting this will display setting screen.

“Hide Buttons”: Selecting this will turn off the icons from the screen.

If “” appears on the screen when you select a control, the operation relevant to the control is not permitted.

Description of DVD video controls

“Menu” and “Top Menu”: If you select any of the above controls, the menu screen for DVD video appears. (For the operation, see the manual that come with the DVD video disc provided separately.)



: Selecting this will rewind during playback.



: Selecting this will stop the video screen.



: Selecting this will pause/resume the video screen.



: Selecting this will fast forward during playback and forward frame by frame during pause.

Description of DVD audio controls

“Top Menu”: If you select this button, the menu screen for DVD audio appears. (For the operation, see the manual that come with the DVD audio disc provided separately.)

“Audio”: The audio changing screen appears. (See page 241.)



: Selecting this will rewind during playback.



: Selecting this will stop the disc.



: Selecting this will pause/resume the disc.



: Selecting this will fast forward during playback and forward frame by frame during pause.

DVD settings

When “**Settings**” is selected on the control icon screens, the following screens will appear according to audio mode.



► DVD video



► DVD audio

Description of DVD video settings

“**Setup**”: The initial set up screen appears. (See page 242.)

“**Search**”: The title search screen appears. (See page 239.)

“**Return**”: Selecting this will display the predetermined scene and start playing from there.

“**Audio**”: The audio changing screen appears. (See page 241.)

“**Subtitle**”: The subtitle changing screen appears. (See page 241.)

“**Angle**”: The angle selection screen appears. (See page 242.)

Description of DVD audio settings

“**Setup**”: The initial set up screen appears. (See page 242.)

“**Select Number**”: The track or number search screen appears. (See page 241.)

“**Search**”: The group search screen appears.


“**Return**”: Selecting this will display the predetermined scene and start playing from there.

“**Prev. Page**”: Select this button to rewind the pages.

“**Next Page**”: Select this button to forward the pages.

“**Subtitle**”: The subtitle changing screen appears. (See page 241.)

“**Angle**”: The angle selection screen appears. (See page 242.)

When you select , the previous screen returns.


Searching by title




DVD video only —

Select “Search” on the settings screen. Enter the title number and select “OK”. The player starts playing video for that title number.

When you push  or , you can select a chapter.

If you enter the wrong numbers, select  to delete the numbers.



When you select , the previous screen returns.


Searching by group



DVD audio only —

Select “Search” on the settings screen. Enter the group number and select “OK”. The player starts playing the disc for that group number.

When you push  or , you can select a track.

If you enter the wrong numbers, select  to delete the numbers.

When you select , the previous screen returns.


Selecting the bonus group



DVD audio only —

Select “Search” on the settings screen. Enter the bonus group number on the searching group screen and select “OK”.

The “Enter Key Code” screen will appear. To enter the number of the group you want to play, select the group number.

If you enter the wrong numbers, select  to delete the numbers.

When you select , the previous screen returns.

Select “OK” on the screen.

The player starts playing the disc from the selected bonus group number.


Selecting the menu number




DVD audio only —

Select “Select Number” on the settings screen.

Enter the menu number and select “OK”.

If you enter the wrong numbers, select  to delete the numbers.

When you select , the previous screen returns.


Changing the subtitle language



Select “Subtitle” on the settings screen.

Each time you select “Subtitle”, the language is selected from the ones stored in the discs and changed.

When you select “Hide”, the subtitle can be hidden.

When you select , the previous screen returns.

Changing the audio language



DVD video only —

Select “Audio” on the settings screen.

Each time you select “Audio”, the language is selected from the ones stored in the discs and changed.

When you select , the previous screen returns.


Changing the audio format



DVD audio only —

Select “Audio” on the control icon screen.

Each time you select “Audio”, another audio format stored on the disc is selected.

When you select , the previous screen returns.

Changing the angle



Select "Angle" on the settings screen. The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

Each time you select "Angle", the angle is selected from the ones stored in the discs and changed.

When you select , and the previous screen returns.

Setup menu



Select "Setup" on the settings screen.

There are initial setting buttons on the "Setup Menu 1" and "Setup Menu 2" screens.

After you change the initial setting, select "OK". The initial setting screen will be turned off and return to the picture previously.

When "Default" is selected, all menus are initialized.


The initial setting can be changed.

• Audio language

You can change the audio language.

1. Select "Audio Language".
2. Select the language you want to hear on the "Audio Language" screen.

If you cannot find the language you want to hear on this screen, select "Other" and enter a language code. For the entry of language code, see the following "Enter audio language code".


To return to the "Setup Menu" screen, select .

• Subtitle language

You can change the subtitle language.

1. Select "Subtitle Language".
2. Select a language you want to read on the "Subtitle Language" screen.

If you cannot find the language you want to read on this screen, select "Other" and enter a language code. For the entry of language code, see the following "Enter audio language code".


To return to the "Setup Menu" screen, select .

• DVD language

You can change the language on the DVD video menu.

1. Select "DVD Language".
2. Select the language you want to read on the "DVD Language" screen.

If you cannot find the language you want to read on this screen, select **“Other”** and enter a language code. For the entry of language code, see the following “Enter audio language code”.

To return to the “Setup Menu” screen, select .

- **Angle mark**


The multi-angle mark can be turned on or off on the screen while the disc which is multi-angle compatible is being played.


1. Select **“Angle Mark”**.
2. Select **“ON”** or **“OFF”**.


- **Parental lock**

The level of viewer restrictions can be changed.

1. Select **“Parental Lock”**.
2. Enter the 4-digit personal code on the **“Key code”** screen.

If you enter the wrong numbers, select  to delete the numbers.

To return to the “Setup Menu” screen, select .

3. Select a parental level (1 — 8) on the **“Select Restriction Level”**. Select  to return to the **“Setup Menu”** screen.

- **Sound dynamic range (if equipped)**

The difference between the lowest volume and the highest volume can be adjusted.

1. Select **“Sound Dynamic Range”**.
2. Select **“MAX”**, **“STD”** or **“MIN”**.



If you select **“Other”** on the **“Audio Language”** screen, **“Subtitle Language”** screen or **“DVD Language”** screen, you can select the language you want to hear or read by entering a language code. (See page 202.)

1. Enter the 4-digit language code.

If you enter the wrong numbers, select



to delete the numbers.

2. Select **“OK”**.

Setup operation from the front seat



This screen appears when a front passenger selects the setup menu.

Rear passengers can cancel this setup operation by selecting **“Play”**. The player will resume normal play.

Likewise, a front passenger can cancel a rear passenger's selection of the setup menu.

● VIDEO CD

Push **"OPTION"** if no icons are shown while watching a video CD, and following screen appears.



"Settings": Selecting this will display setting screen.

"Hide Buttons": Selecting this will turn off the icons from the screen.

If "⊗" appears on the display when you select a control, the operation is not permitted.

Description of video CD controls

: Select this to rewind during playback.

: Selecting this will stop the video screen.

: Use this to pause/resume the video screen.

: Select this to fast forward during the playback and start playing frame by frame during pause.

Video CD settings

When **"Settings"** is selected on the control icon screen, the following screen will appear.



Description of video CD settings

"Select Number": The track or number search screen appears. (See "Searching by track" on page 245.)

"Return": Selecting this will display the predetermined scene and start playing from there.

"Prev. Page": When you select this while the disc menu is displayed, the previous page appears on the screen. If you select this while the player is playing video, the previous track is searched and played.

"Next Page": When you select this while the disc menu is displayed, the next page appears on the display. If you select this while the player is playing video, the next track is searched and played.

"MAIN/SUB": A multiplex transmission changing control. The mode changes from Main/Sub to Main, to Sub and back to Main/Sub by selecting this control.



Select **"Select Number"** on the settings screen.

Enter the track numbers and select **"OK"**. The player starts playing video for that title number.

You can select a track number by pushing or .

If you enter the wrong numbers, select to delete the numbers.

Select , and the previous screen returns.

• IF THE REAR SEAT ENTERTAINMENT SYSTEM MALFUNCTIONS

If the rear seat entertainment system malfunctions, the system will display one of the following messages:

If "No disc found" appears on the display: This indicates that there is no disc in the rear DVD player.

If "Check disc ×" or "Check disc" appears on the display: This indicates that the disc is dirty, damaged, or it is inserted upside down. Clean the disc or insert it correctly. If a disc which is not playable is inserted, "Check disc ×" or "Check disc" will also appear on the screen. For appropriate discs for the changer or player, see "Audio/video system operating hints" on page 249.

If "Region code error" appears on the display: This indicates that the region code of the inserted disc is not compatible with the DVD changer or rear DVD player. Insert a disc with a region code of "ALL" or "1".

If "DVD error" appears on the display: The following causes are possible.

- There is a problem inside the system. Eject the disc.
- The inside of the changer unit may be too hot due to a very high ambient temperature. Eject the disc and allow the changer or player to cool down.

If "No music files found" appears on the display: This indicates that the disc has no playable data.

If the malfunction is not rectified: Take your vehicle to your dealer.

— Using the video mode

• USING THE PORT



► 5-seat models (with rear DVD player)



► 5-seat models (without rear DVD player)



► 4-seat models

Open the cover.

The A/V input port is composed of 3 input ports.

Yellow: Image input port

White: Left channel audio input port

Red: Right channel audio input port

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the A/V input port. For details, refer to the manufacturer's instructions.

The power outlet is used to connect the audio-video equipment. See the vehicle owner's manual.

NOTICE

When the A/V input port is not in use, keep the A/V input port cover closed. Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

• SELECTING THE VIDEO MODE



Push “VIDEO”, or select “VIDEO” on the source screen to select the video mode.

— Changing other settings

• CHANGING TO PAL FORMAT



1. Push “DISPLAY”.



2. Turn “PAL VIDEO” on when PAL format equipment is connected to the A/V input port.

“PAL VIDEO” is highlighted.

• SETTING THE DISPLAY MODE



Pushing “SIZE” changes the display modes sequentially as follows:

Normal → Wide 1 → Wide 2 → Normal

• ADJUSTING THE SCREEN



1. Push “DISPLAY”.



2. Select the desired button to adjust color, tone, contrast and brightness. After adjusting the screen, select "OK".

"Color" "R":

Strengthens the red color of the screen.

"Color" "G":

Strengthens the green color of the screen.

"Tone" "+": Strengthens the tone of the screen.

"Tone" "-": Weakens the tone of the screen.

"Contrast" "+":

Strengthens the contrast of the screen.

"Contrast" "-":

Weakens the contrast of the screen.

"Brightness" "+":

Brightens the screen.

"Brightness" "-":

Darkens the screen.

Screen off (Console display only)



The screen goes off when "Screen Off" is selected. To turn the display screen back on, push "DVD", "VIDEO", "ON", "SOURCE", "MAP" or "DISPLAY" for the display. The selected screen appears.

AUTOMATIC CLOSING OF THE REAR DISPLAY (OVERHEAD DISPLAY)



1. Push "DISPLAY".



2. Select "Auto Close".

If "Auto Close" is on, the display will automatically close when the "POWER" <"ENGINE START STOP"> switch is turned OFF.

The display will automatically open when the "POWER" <"ENGINE START STOP"> switch is turned to ACCESSORY or ON <IGNITION ON> mode.

— Display the map screen



1. Push “MAP”.

The map screen will appear.

Audio/video system
operating hints**NOTICE**

To ensure correct audio/video system operations:

- *Be careful not to spill beverages over the audio/video system.*
- *Do not put anything other than an appropriate discs into the CD changer or DVD changer.*
- *The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio/video system which you are listening to. However, this does not indicate a malfunction.*

● RADIO RECEPTION

Usually, a problem with radio reception does not mean there is a problem with your radio — it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or telephone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther you are from a station, the weaker its signal will be. In addition, reception conditions change constantly as your vehicle moves.

Here are some common reception problems that probably do not indicate a problem with your radio:

FM

Fading and drifting stations — Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path — FM signals are reflective, making it possible for two signals to reach your antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering — These occur when signals are blocked by buildings, trees, or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping — If the FM signal you are listening to is interrupted or weakened, and there is another strong station nearby on the FM band, your radio may tune in the second station until the original signal can be picked up again.

AM

Fading — AM broadcasts are reflected by the upper atmosphere — especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference — When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static — AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening, or electrical motors. This results in static.

XM®

Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM® Satellite Radio.

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

● iPod

About iPod —

- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Compatible models —

Model	Generation	Software version
iPod	5th generation	Ver. 1.2.0 or higher
iPod nano	1st generation	Ver. 1.3.0 or higher
	2nd generation	Ver. 1.1.2 or higher
	3rd generation	Ver. 1.0.0 or higher
iPod touch	1st generation	Ver. 1.1.0 or higher
iPod classic	1st generation	Ver. 1.0.0 or higher

Depending on differences between models or software versions etc., some models listed above might be incompatible with this system.

iPod 4th generation and earlier models are not compatible with this system.

iPhone, iPod mini, iPod shuffle and iPod photo are not compatible with this system.

● USB MEMORY

USB memory that can be used for MP3 and WMA playback.

- USB communication formats: USB 2.0 FS (12 MBPS)
- File formats: FAT 16/32 (Windows®)
- Correspondence class: Mass storage class

● CARING FOR YOUR CD CHANGER, DVD CHANGER AND DISCS

- Your CD changer and DVD changer is intended for use with 4.7 in. (12 cm) discs only.
- Extremely high temperatures can keep your CD changer and DVD changer from working. On hot days, use the air conditioning to cool the vehicle interior before you use the changer and player.
- Bumpy roads or other vibrations may make your CD changer and DVD changer skip.
- If moisture gets into your CD changer and DVD changer, you may not play even though they appear to be working. Remove the discs from the changer and wait until it dries.

CD changer



- Use only discs marked as shown above. The following products may not be playable on your changer.



















SACD
Copy-protected CD
CD-ROM



CAUTION

CD changer and DVD changer use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the changers correctly.

AUDIO/VIDEO SYSTEM

DVD changer		DVD player	
Audio CDs	   	Audio CDs	   
DVD video discs	 	DVD video discs	 
DVD audio discs		DVD audio discs	
Video CDs	 	Video CDs	 

- Use only discs marked as shown above. The following products may not be playable on your changer.
 - SACD
 - Copy-protected CD
 - CD-ROM
 - DVD-R
 - DVD+R
 - DVD-RW
 - DVD+RW
 - DVD-ROM
 - DVD-RAM
- Use only discs marked as shown above. The following products may not be playable on your player.
 - SACD
 - Copy-protected CD
 - CD-ROM
 - DVD-ROM
 - DVD-RAM




► Special shaped discs



► Labeled discs




► Transparent/translucent discs

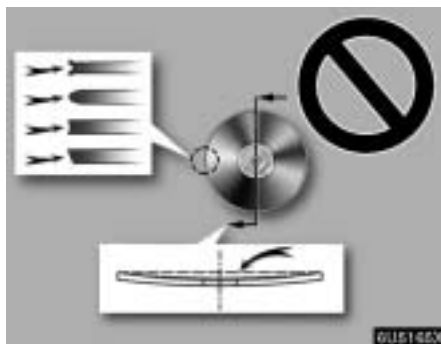

► Low quality discs

NOTICE

- *Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player or changer, or it may be impossible to eject the disc.*
- *This system is not designed for use of Dual Disc. Do not use Dual Disc because it may cause damage to the changer.*
- *Do not use a disc with protection ring. The use of such disc may damage the changer, or it may be impossible to eject the disc.*

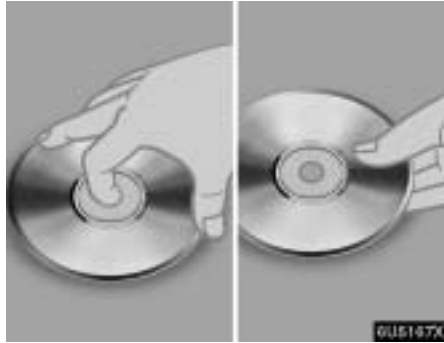

► **Correct**

► **Wrong**

- Handle discs carefully, especially when you are inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes, or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when you are not using them. Store them in their plastic cases away from moisture, heat, and direct sunlight.



To clean a disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

● MP3/WMA FILES

- MP3 (MPEG Audio Layer 3) and WMA (Windows Media Audio) are audio compression standards.
- The MP3/WMA player can play MP3 and WMA files on CD-ROM, CD-R and CD-RW discs.
The unit can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system.
- When naming an MP3 or WMA file, add the appropriate file extension (.mp3 or .wma).
- The MP3/WMA player plays back files with .mp3 or .wma file extensions as MP3 or WMA files. To prevent noise and playback errors, use the appropriate file extensions.
- The MP3/WMA player can play only the first session using multi-session compatible CDs.
- MP3 player — MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, and Ver. 2.3 formats. The unit cannot display disc title, track title and artist name in other formats.
- USB memory — MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, Ver. 2.3 and Ver. 2.4 formats. The unit cannot display track title and artist name in other formats.
- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz.

Sampling frequency


- MP3 files for MP3 player:
MPEG 1 LAYER 3 — 32, 44.1, 48 kHz
MPEG 2 LSF LAYER 3 — 16, 22.05, 24 kHz
- MP3 files for USB memory:
MPEG 1 AUDIO LAYER 2, 3 — 32, 44.1, 48 kHz
MPEG 2 AUDIO LAYER 2, 3 — 16, 22.05, 24 kHz
MPEG 2.5 — 8, 11.025, 12 kHz
- WMA files for WMA player:
Ver. 7, 8, 9 CBR — 32, 44.1, 48 kHz
- WMA files for USB memory:
Ver. 9 — HIGH PROFILE 32, 44.1, 48 kHz
- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.

Playable bit rates


- MP3 files for MP3 player:
MPEG1 LAYER3 — 64 to 320 kbps
MPEG2 LSF LAYER3 — 64 to 160 kbps
- MP3 files for USB memory:
MPEG 1 AUDIO LAYER 2, 3 — 32 to 320 kbps
MPEG 2 AUDIO LAYER 2, 3 — 32 to 160 kbps
MPEG 2.5 — 32 to 160 kbps
- WMA files for WMA player:
Ver. 7, 8 CBR — 48 to 192 kbps
Ver. 9 CBR — 48 to 320 kbps
- WMA files for USB memory:
Ver. 9 — HIGH PROFILE 32 to 320 kbps, VBR (Variable Bit Rate)
- The MP3/WMA player does not play back MP3/WMA files from discs recorder using packet write data transfer (UDF format). Discs should be recorded using “pre-mastering” software rather than packet-write software.

AUDIO/VIDEO SYSTEM

- M3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if fast-forward or rewind operations are used.
- It is not possible to check folders that do not include MP3/WMA files.
- MP3/WMA files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than two levels of folders.

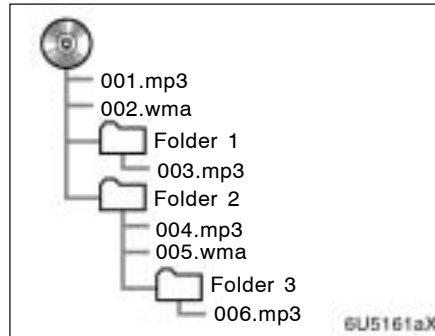

 - The play order of the compact disc with the structure shown above is as follows:



- MP3/WMA player — It is possible to play up to 192 folders or 255 files on one disc.
- USB memory — It is possible to play up to 999 folders, 255 files per folder or 65,025 files in device.
- The order changes depending on the PC and MP3/WMA encoding software you use.

● CD-R AND CD-RW DISCS

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the MP3/WMA player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

● TERMS

Packet write —

This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

ID3 Tag —

This is a method of embedding track-related information in an MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to the number of characters, the information can be viewed when the track is played back.

WMA Tag —

WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.

ISO 9660 format —

This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are two levels of regulations.

Level 1:

The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “_” symbol may also be included.)

Level 2:

The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

AUDIO/VIDEO SYSTEM

m3u —

Playlists created using “WINAMP” software have a playlist file extension (.m3u).

MP3 —

MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

WMA —

WMA (Windows Media Audio) is an audio compression format developed by Microsoft®. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8, and 9.